


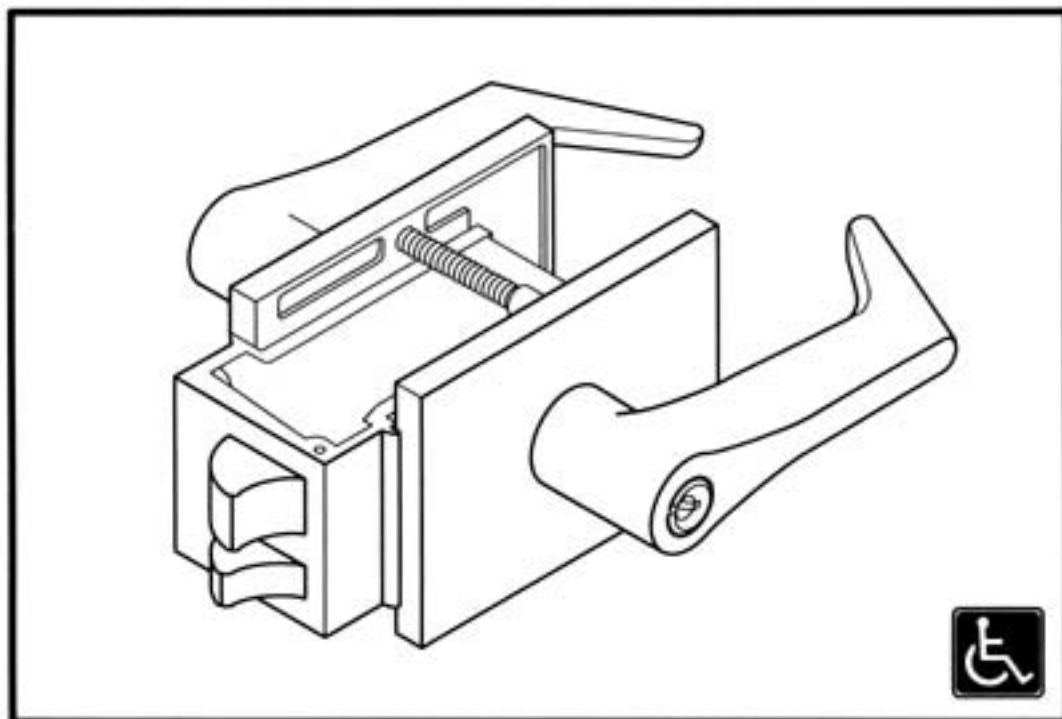

UT5200 Series

Pre-Assembled Unit Lockset

Parts and Service Manual



Corbin Russwin Architectural Hardware
Berlin, CT 06037 USA

Quick Conversion

As of May 1993, Corbin Russwin has introduced a new simplified product numbering system that makes it easy to identify, specify and order a complete line of architectural hardware.

Although the catalog numbers have changed, the part numbers have remained the same. Identifying parts is as easy as it's always been! To find a function or trim design, simply use this "Quick Conversion" as a helpful cross reference bridge from the former Corbin and Russwin languages (pre-May 1993) to the new Corbin Russwin language.

Corbin

Function No. Before 5/93	Function No. After 5/93	Page
310	UT5210	4
320	UT5220	6
351	UT5251	8
354	UT5272	16
355	UT5255	10
357	UT5257	12
361	UT5261	14
388	UT5282	18


Trim Design Before 5/93	Trim Design After 5/93
912R	ESE
964 Global	GRE
966 Pierce	BRE

Russwin


Function No. Before 5/93	Function No. After 5/93	Page
510	UT5210	4
520	UT5220	6
540	UT5251	8
540 ^{5/8}	UT5255	10
546	UT5261	14
546 ^{1/2}	UT5272	16
548 ^{1/2}	UT5282	18
552	UT5257	12

Trim Design Before 5/93	Trim Design After 5/93
912R	ESE
Ashford	GRE
Belmont	BRE


Functions

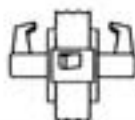


UT5210
ANSI F36
Passage or Closet

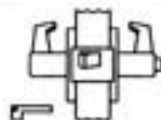

UT5220
ANSI F37
Privacy, Bedroom
or Bathroom

 


UT5251
ANSI F40
Entrance or Office

 


UT5255
ANSI F42
Classroom




UT5257
ANSI F44
Storeroom or Closet

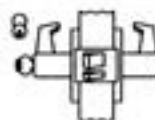

UT5261
ANSI F41
Entrance or Office
(Levers Only)

 

UT5272
ANSI F45
Apartment, Exit or
Public Toilet

 

UT5282
ANSI F46
Store Door

(Shading indicates rigid levers.)

Do You Have the Current Model?

Historically, no lockset design has been as closely associated with the Corbin Russwin brand name as the unit lock. The unit lock's sturdy, rugged construction gives it an unrivaled lifetime of smooth, trouble-free operation. Tens of thousands of these locks have already outlasted the buildings they were installed in! Now closing in on its 100th anniversary, the unit lock has evolved through several different models.

The rectangular chassis unit lock was invented by Byron Phelps, former mayor of Seattle, Washington. He brought his invention across the country in 1898 to P. & F. Corbin, who licensed and manufactured it. The first patents were issued on January 31 and June 6, 1899. Today's UT5200 Series locksets are closely based on that design.

Instead of Corbin's large rectangular chassis, the earliest Russwin unit lock had a different design and door prep. A 1" round knob spindle was completely separated from a small rectangular case around the latch area. This design was invented by Henry Voight, an extremely prolific lock inventor of that era, then employed by Russell & Erwin Mfg. Co. Its first patents issued on April 19 and August 30, 1904.

The exploded views in this manual are limited to the current model of UT5200 Series parts. For most functions, this includes all locks manufactured since 1968, although certain current parts will operate in some older models. Since locksmiths are often called on to rekey older locksets, we include cylinder removal instructions for earlier models later in this manual. Use the table below to help identify the various models.

In reviewing the table, keep in mind that Corbin Russwin began as separate companies, so there is not a Corbin-to-Russwin cross-reference for the early models.

Old catalogs, price books and engineering drawings, as well as physical samples were studied to compile the table. However, a few pieces of the puzzle were still missing at press time.

Anyone with locksets or positive documentation to correct or add to this information is invited to contact the Corbin Russwin Marketing Department.

With lock removed, apply these clues to the table below to determine the mode of your lock.

- If it bears the Russwin name and the knobs have a round shaft separate from a small rectangular chassis, it is the Russwin 2100 / 2800 Series.
- Look for numbers cast into underside of escutcheons.
- Observe keyway orientation and measure chassis dimensions.
- Read latest patent date stamped into chassis cover.
- Look for numbers stamped into top or bottom edge of chassis frame (Note: some numbers are not significant)

Corbin Series	Russwin Series	Keyway	Chassis Dimensions	Backset	Cylinder Series	First Sold	Last Sold	Remarks
(0)2000*	—	vert.	$\left\{ \begin{array}{l} 1\frac{1}{2} \times 3\frac{1}{2} \\ 1\frac{1}{2} \times 3\frac{3}{4} \\ 2 \times 3\frac{3}{4} \end{array} \right\}$	$\left\{ \begin{array}{l} 2\frac{3}{4} \\ 3 \\ 3 \end{array} \right\}$	250	1899	1913	4 or 5-pin 99 or 97 keyway
(0)2200*	—	vert.	$\left\{ \begin{array}{l} 2\frac{3}{16} \times 4 \\ 2\frac{5}{8} \times 4 \end{array} \right\}$	$\left\{ \begin{array}{l} 3 \\ 3 \end{array} \right\}$	250	1913	1953	anti-friction fire (dead)latch
(0)2400*	—	vert.	$\left\{ \begin{array}{l} 2 \times 3\frac{1}{2} \\ 2 \times 3\frac{3}{4} \\ 2\frac{5}{8} \times 3\frac{3}{4} \end{array} \right\}$	$\left\{ \begin{array}{l} 2\frac{3}{4} \\ 3 \\ 3 \end{array} \right\}$	250	1913	1953	
—	2100/2800	vert.	(see remarks)	3"	2100	1904	1968	small chassis + 1" spindle
7xx-500	—	vert.	$2\frac{5}{8} \times 3\frac{3}{4}$	3"	250	1954	1966	= largest 2400 Series renamed
?	—	vert.	$1\frac{3}{8} \times 3$	$2\frac{3}{8}$?	?	?	small model
9xx-700	1600	horiz.	$1\frac{3}{4} \times 3\frac{1}{4}$	$2\frac{1}{2}$	260 & 250	1949	1954	small model
9xx-900	600	horiz.	$1\frac{3}{4} \times 3\frac{1}{4}$	$2\frac{1}{2}$	460	1955	1963	
9xx-300	500	horiz.	$1\frac{3}{4} \times 3\frac{5}{8}$	$2\frac{1}{2}$	460	1963	current	changed in 1968; now UT5200

* "0" prefix designates deadlatching. Numbers without this prefix are not deadlatching.

UT5210 - Passage or Closet

ITEM	PART NO.	SPECIFY	DESCRIPTION
1	(see chart below)		Lever or Knob; plain both sides
2	613F02-9		Lever Insert (gray)
4	102F19-8 060F91-8		Lever Shank Knob Shank
5	242F50-8 219F80-8		Shank Retainer for lever knob
6	103F44-8 103F45-8		Return Spring clockwise (RH) lever counter-clockwise (LH) lever
7	171F79-8		Return Spring Anchor
8	144F33 144F34 301F56-7 605F90 415F15 415F16 415F27-7 605F91	fin fin	Escutcheon (lever trim) inside outside outside, extended lip inside, lead lined option M28 Escutcheon (knob trim) inside outside outside, extended lip inside, lead lined option M28

 

 

ITEM	PART NO.	SPECIFY	DESCRIPTION
9	222F85	fin	Mounting Screw
10	496F33	fin	Chassis
11	138F88-8		Chassis Cover
12	060F42-8		Hub
13	060F33-8		Hub Spacer
14	249F76-8		Screw, fixed escutcheon
15	078F07-8		Grip Retainer
16	078F08-8		Grip Retainer Ring
17	401F08	fin	Sleeve
36	236L75M020	fin	ANSI Strike (see page 23 for options)
37	480F70	fin	Screw Packet for strike

Levers (Specify Finish)

Note: Levers are handed.

RH lever: Clockwise rotation. For
outside of RH or RHR locks and
inside of LH or LHR locks.


LH lever: Counter-clockwise rotation. For
outside of LH or LHR locks and
inside of RH or RHR locks.

	Regular		Tactile Warning	
	Essex (RH) 	Essex (LH) 	Essex (RH) 	Essex (LH) 
Plain	613F10-2	613F11-2	613F14-2	613F15-2

Knobs (Specify Finish)

	Regular		Tactile Warning	
	Global	Belmont	Global	Belmont
Plain	383F66	406F33	575F58	575F64

UT5210 - Passage or Closet

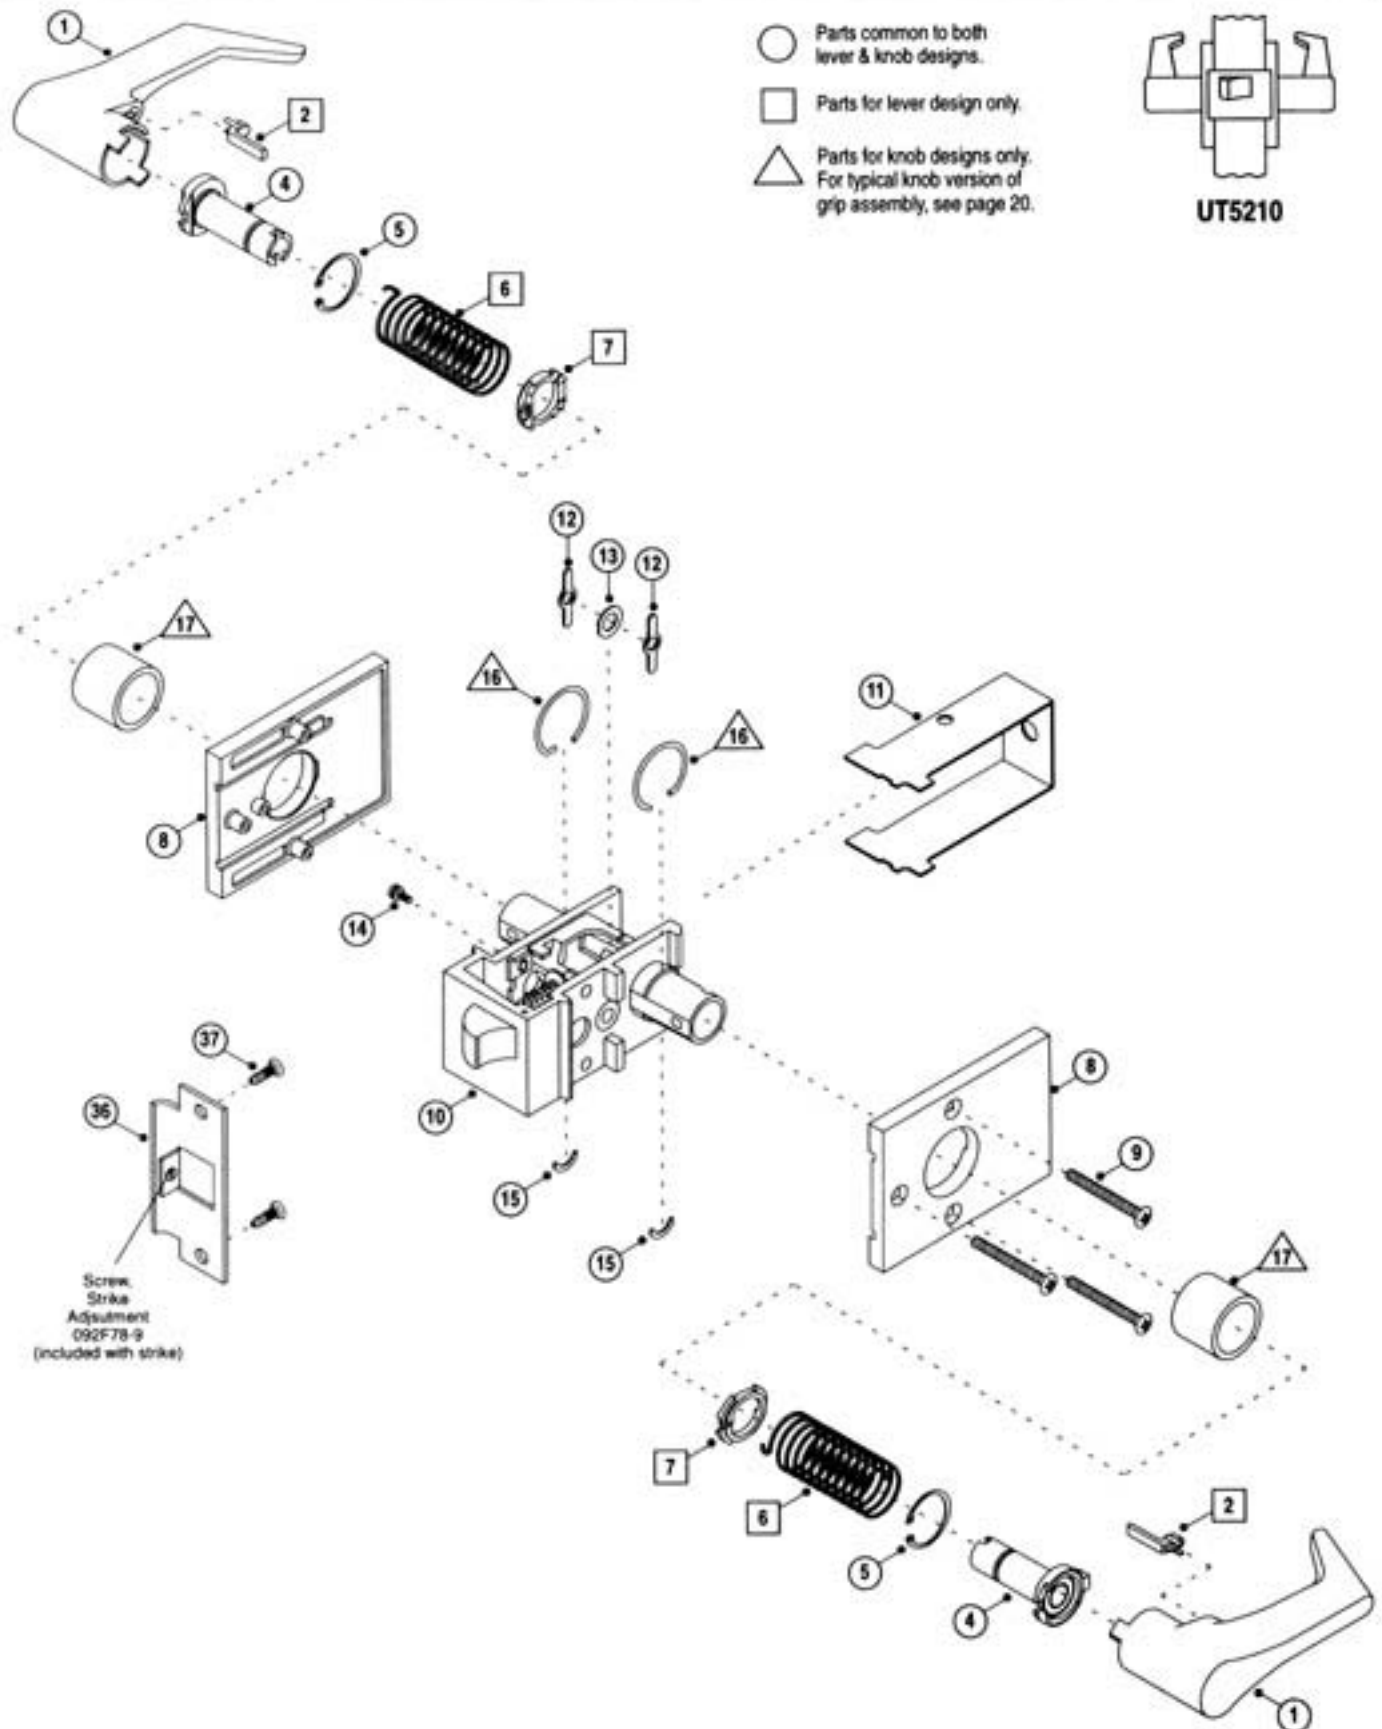

UT5220 - Privacy, Bedroom or Bathroom





ITEM	PART NO.	SPECIFY	DESCRIPTION	ITEM	PART NO.	SPECIFY	DESCRIPTION
1	(see chart below)		Lever or Knob; privacy key outside x button inside	12 a.	060F42-8		Hub
2	613F02-9		Lever Insert (gray)	12 b.	071F62-8		Hub
4	114F67-8 102F37-8 202F33-8 133F41-8		Lever Shank, outside Lever Shank, inside Knob Shank, outside Knob Shank, inside	12 c.	081F77-8		Hub
5	242F50-8 219F80-8		Shank Retainer for lever knob	13 a.	070F42-8		Hub Spacer
6	103F44-8 103F45-8		Return Spring clockwise (RH) lever counter-clockwise (LH) lever	13 b.	070F43-8		Hub Spacer
7	171F79-8		Return Spring Anchor	14	249F76-8		Screw, fixed escutcheon
8	144F33 144F34 301F56-7 605F90 415F15 415F16 415F27-7 605F91	fin fin	Escutcheon (lever trim) inside outside outside, extended lip inside, lead lined option M28 Escutcheon (knob trim) inside outside outside, extended lip inside, lead lined option M28	15	078F07-8		Grip Retainer
9	222F85	fin	Mounting Screw	16	078F08-8		Grip Retainer Ring
10	496F34	fin	Chassis	17	401F08	fin	Sleeve
11	138F88-8		Chassis Cover	18	022F80	fin	Button Assy.
				19	022F72-3		Button Spring
				20	060F05-3		Shoe Spring
				21	071F67-3		Spindle Spring
				22	201F18-8		Spindle
				35	398F43-8		Emergency Key
				36	236L75M020	fin	ANSI Strike (see page 23 for options)
				37	480F70	fin	Screw Packet for strike

Levers (Specify Finish)

Note: Levers are handed.

RH lever: Clockwise rotation. For
outside of RH or RHR locks and
inside of LH or LHR locks.


LH lever: Counter-clockwise rotation. For
outside of LH or LHR locks and
inside of RH or RHR locks.

	Regular		Tactile Warning	
	Essex (RH) 	Essex (LH) 	Essex (RH) 	Essex (LH) 
Cylinder or Button Privacy Key Hole	582F11-2 613F12-2	582F12-2 613F13-2	582F13-2 613F16-2	582F14-2 613F17-2

Knobs (Specify Finish)

	Regular		Tactile Warning	
	Global	Belmont	Global	Belmont
Cylinder or Button Privacy Key Hole	383F65 383F67	406F32 406F34	575F57 575F59	575F63 575F65

UT5220 - Privacy, Bedroom or Bathroom

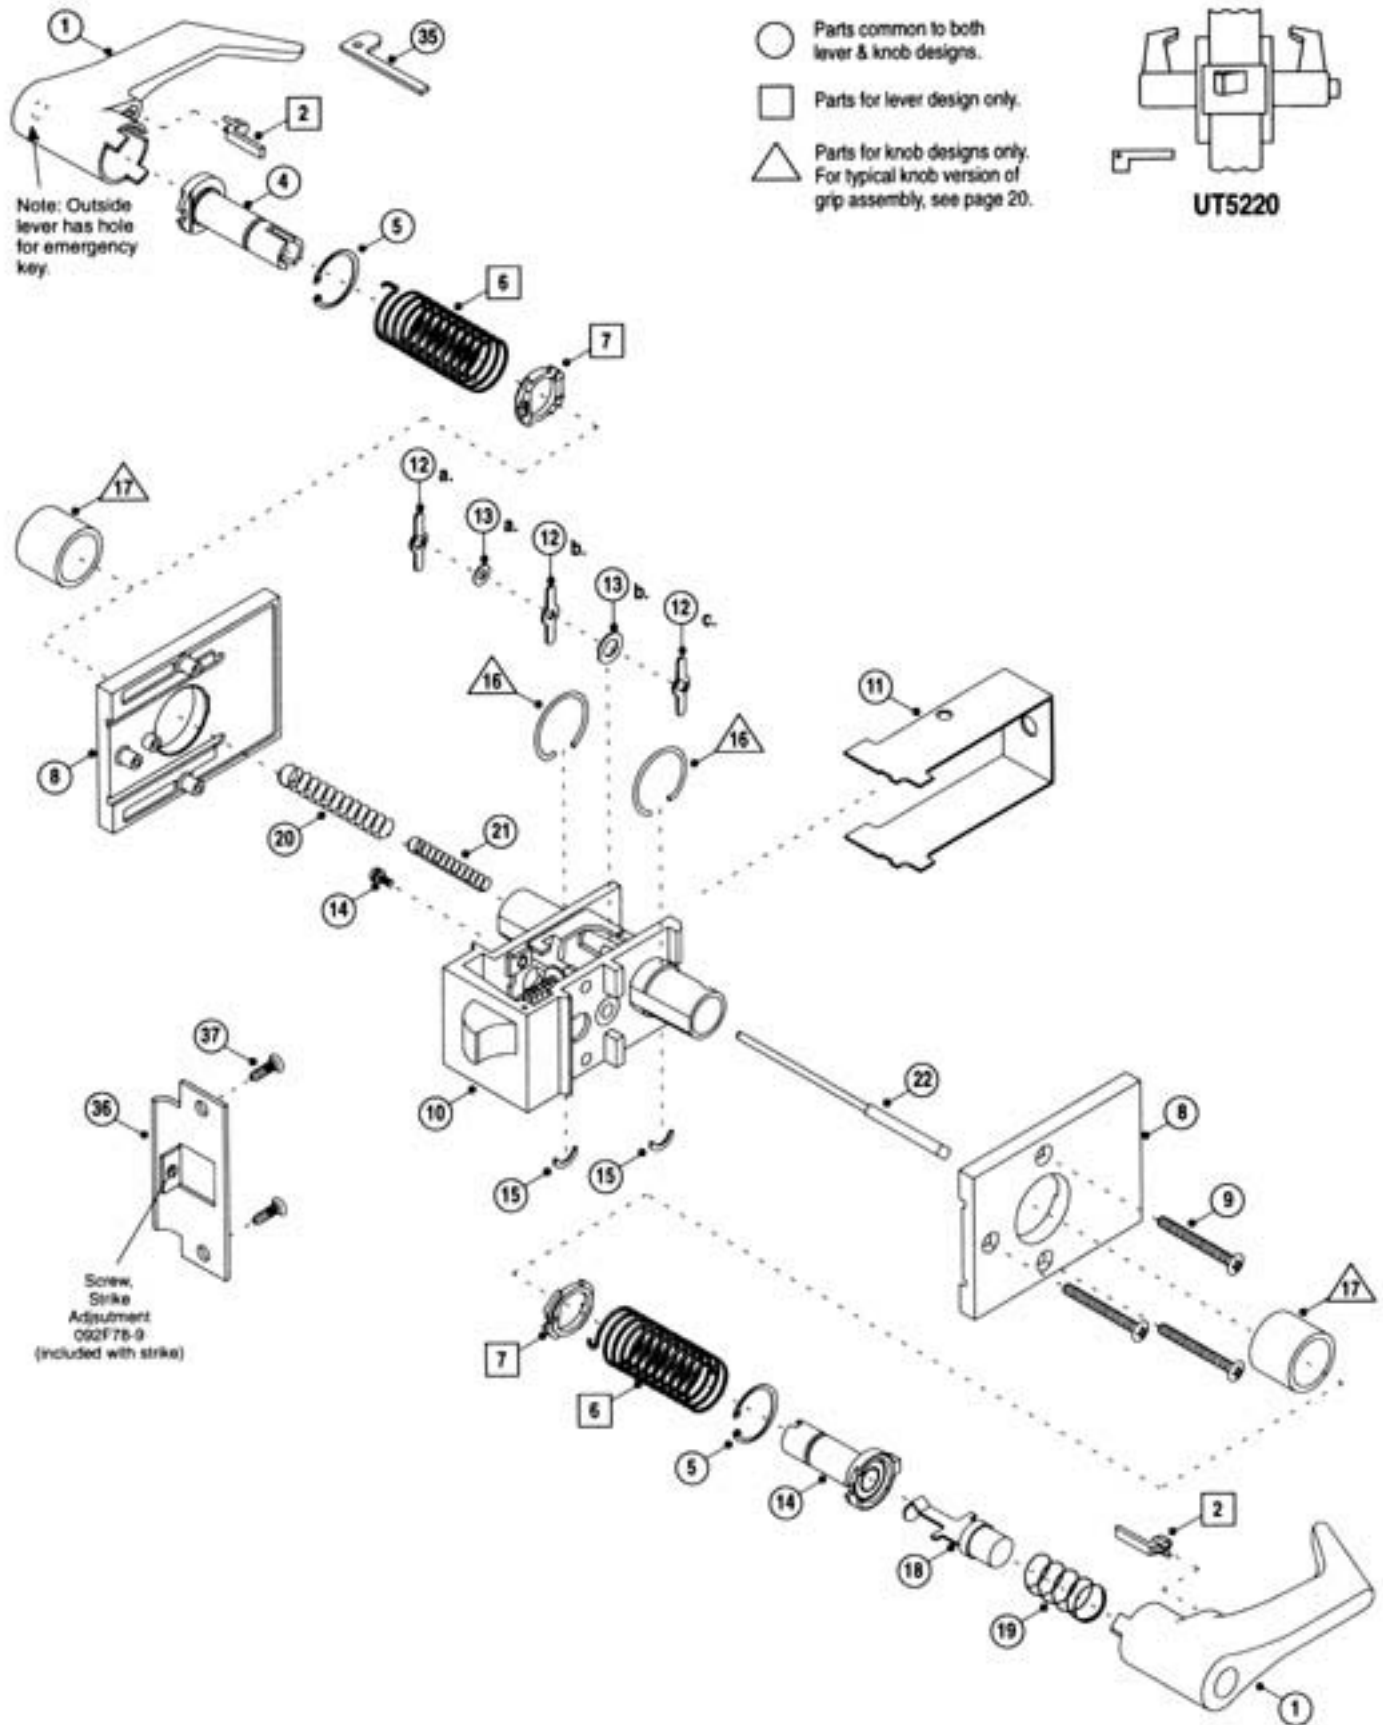

UT5251 - Entrance or Office

ITEM	PART NO.	SPECIFY	DESCRIPTION
1	(see chart below)		Lever or Knob; cylinder/button both sides
2	613F02-9		Lever Insert (gray)
3	2000-052	fin	Standard Cylinder (see page 23 for options)
4	188F75-8 188F73-8 187F07-8 147F08-8		Lever Shank, outside Lever Shank, inside Knob Shank, outside Knob Shank, inside
5	242F50-8 219F80-8		Shank Retainer for lever knob
6	103F44-8 103F45-8		Return Spring clockwise (RH) lever counter-clockwise (LH) lever
7	171F79-8		Return Spring Anchor
8	144F33 144F34 301F56-7 605F90 415F15 415F16 415F27-7 605F91	fin fin	Escutcheon (lever trim) inside inside outside, extended lip inside, lead lined option M28 Escutcheon (knob trim) inside outside outside, extended lip inside, lead lined option M28
9	222F85	fin	Mounting Screw

 

 
 
ITEM	PART NO.	SPECIFY	DESCRIPTION
10	496F32	fin	Chassis
11	138F88-8		Chassis Cover
12	060F42-8		Hub
12	140F07-8		Hub
12	140F97-8		Hub
14	249F76-8		Screw, fixed escutcheon
15	078F07-8		Grip Retainer
16	078F08-8		Grip Retainer Ring
17	401F08	fin	Sleeve
18	157F11	fin	Button Assy.
21	249F77-3		Spindle Spring
22	144F30-8		Spindle
23	019F13-7		Spindle Drive Pin
24	019F11-7		Spindle Spring Seat
25	144F29-8		Plug Driver
26	205F61-8		Plug Driver Assy. Follower
36	236L75M020	fin	ANSI Strike (see page 23 for options)
37	480F70	fin	Screw Packet for strike

Levers (Specify Finish)

Note: Levers are handed.

RH lever: Clockwise rotation. For
outside of RH or RHR locks and
inside of LH or LHR locks.


LH lever: Counter-clockwise rotation. For
outside of LH or LHR locks and
inside of RH or RHR locks.

	Regular		Tactile Warning	
	Essex (RH) 	Essex (LH) 	Essex (RH) 	Essex (LH) 
Cylinder or Button	582F11-2	582F12-2	582F13-2	582F14-2
6-Pin IC	489F88-2	489F89-2	549F35-2	549F36-2
7-Pin IC	613F22-2	613F23-2	613F24-2	613F25-2

Knobs (Specify Finish)

	Regular		Tactile Warning	
	Global	Belmont	Global	Belmont
Cylinder or Button	383F65	406F32	575F57	575F63
6-Pin IC	482F75	438F79	577F54	577F59

UT5251 - Entrance or Office

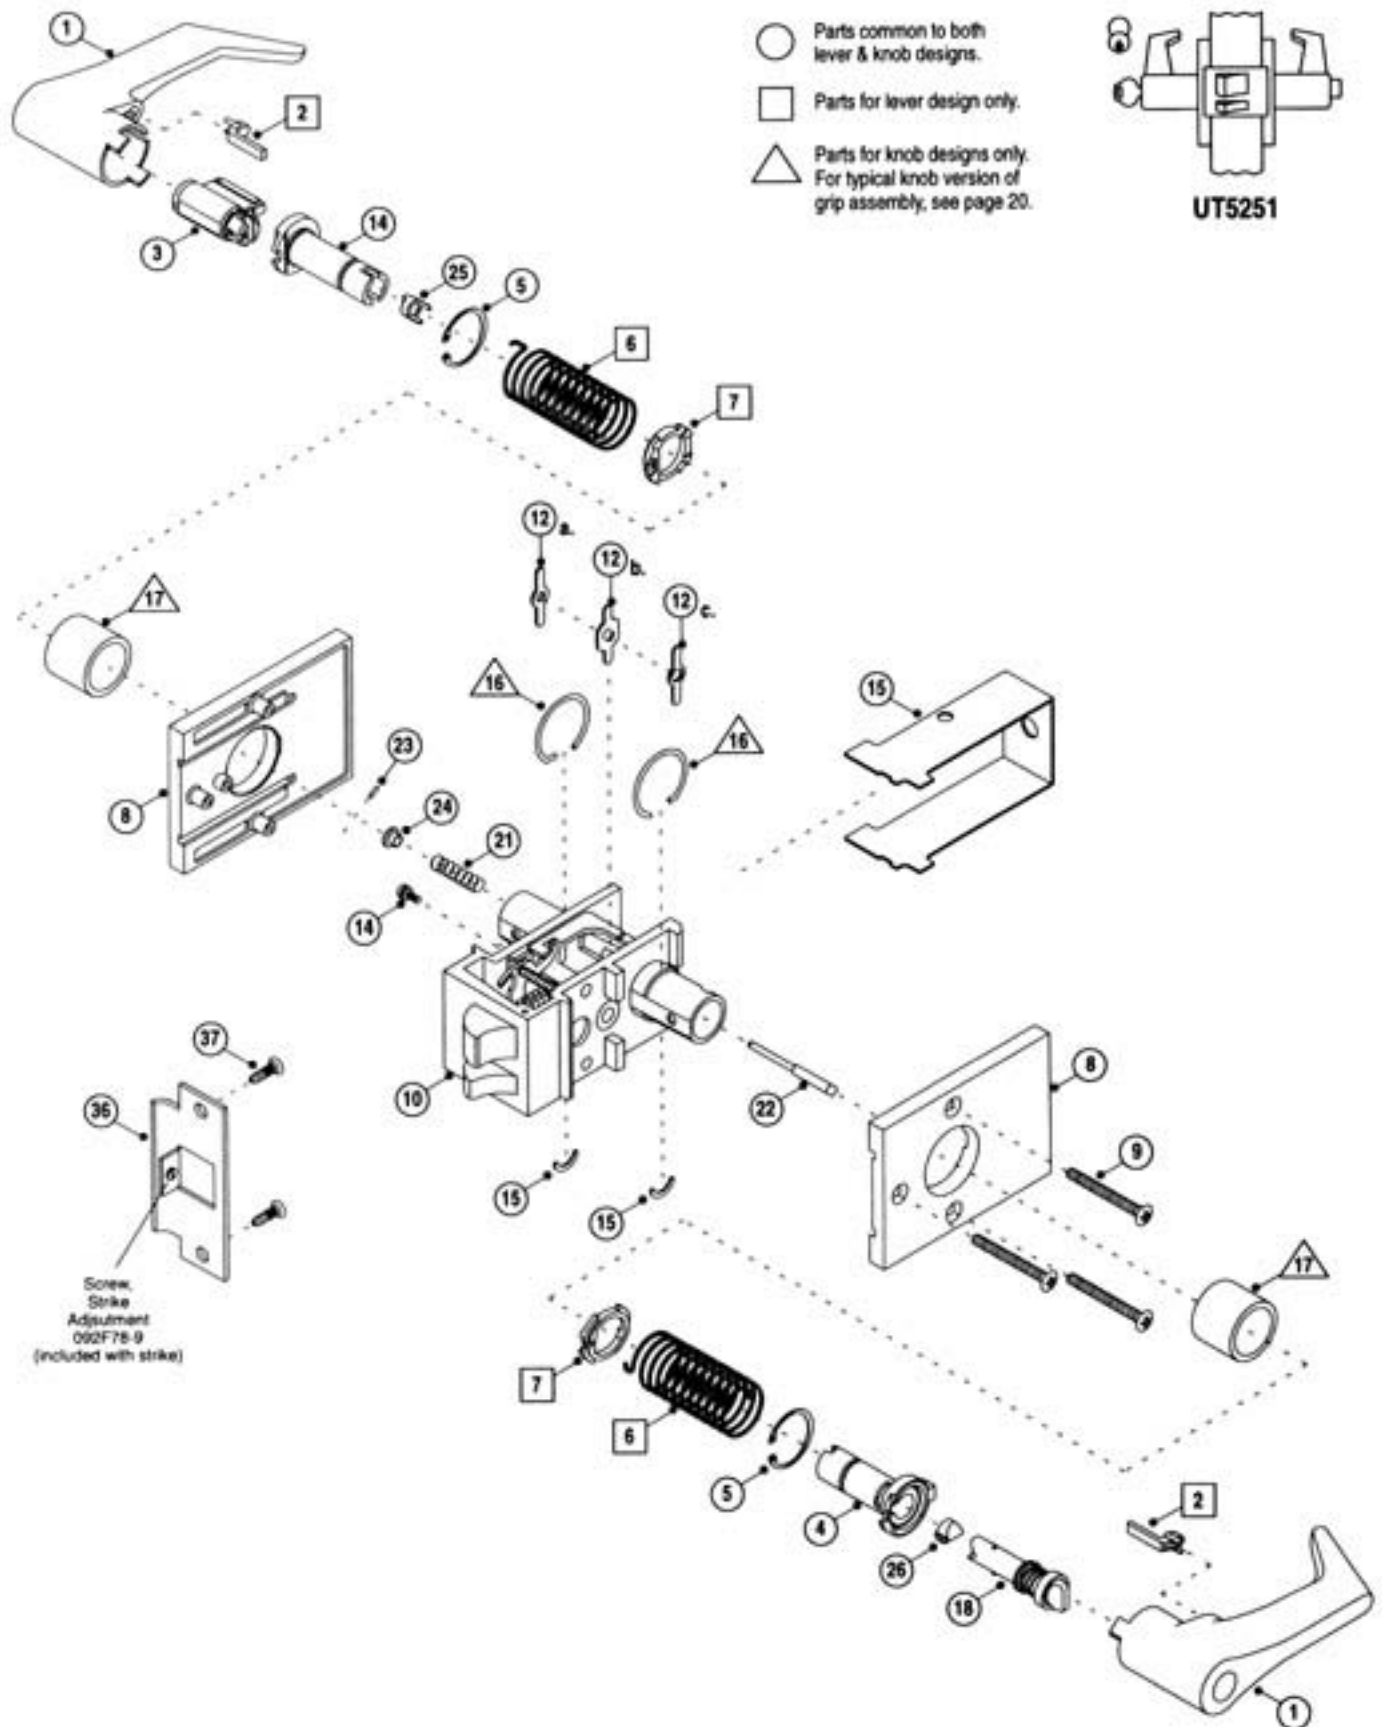

UT5255 - Classroom

ITEM	PART NO.	SPECIFY	DESCRIPTION
1	(see chart below)		Lever or Knob; cylinder/button outside x plain inside
2	613F02-9		Lever Insert (gray)
3	2000-052	fin	Standard Cylinder (see page 23 for options)
4	605F77-8 605F76-8 605F80-8 605F81-8		Lever Shank, outside Lever Shank, inside Knob Shank, outside Knob Shank, inside
5	242F50-8 219F80-8		Shank Retainer for lever knob
6	103F44-8 103F45-8		Return Spring clockwise (RH) lever counter-clockwise (LH) lever
7	171F79-8		Return Spring Anchor
8	144F33 144F34 301F56-7 605F90 415F15 415F16 415F27-7 605F91	fin fin	Escutcheon (lever trim) inside outside outside, extended lip inside, lead lined option M28 Escutcheon (knob trim) inside outside outside, extended lip inside, lead lined option M28





ITEM	PART NO.	SPECIFY	DESCRIPTION
9	222F85	fin	Mounting Screw
10	496F32	fin	Chassis
11	138F88-8		Chassis Cover
12	147F07-8		Hub
13	606F03-8		Hub Spacer
14	249F76-8		Screw, fixed escutcheon
15	078F07-8		Grip Retainer
16	078F08-8		Grip Retainer Ring
17	401F08	fin	Sleeve
21	249F77-3		Spindle Spring
22	606F02-8		Spindle
25	606F01-8		Plug Driver
26	205F61-8		Plug Driver Assy. Follower
28	168F81-8		Plug Driver Assy.
36	236L75M020	fin	ANSI Strike (see page 23 for options)
37	480F70	fin	Screw Packet for strike

Levers (Specify Finish)

Note: Levers are handed.

RH lever: Clockwise rotation. For
outside of RH or RHR locks and
inside of LH or LHR locks.

 
LH lever: Counter-clockwise rotation. For
outside of LH or LHR locks and
inside of RH or RHR locks.

	Regular		Tactile Warning	
	Essex (RH) 	Essex (LH) 	Essex (RH) 	Essex (LH) 
Cylinder or Button	582F11-2	582F12-2	582F13-2	582F14-2
6-Pin IC	489F88-2	489F89-2	549F35-2	549F36-2
7-Pin IC	613F22-2	613F23-2	613F24-2	613F25-2
Plain	613F10-2	613F11-2	613F14-2	613F15-2

Knobs (Specify Finish)

	Regular		Tactile Warning	
	Global	Belmont	Global	Belmont
Cylinder or Button	383F65	406F32	575F57	575F63
6-Pin IC	482F75	438F79	577F54	577F59
Plain	383F66	406F33	575F58	575F64

UT5255 - Classroom

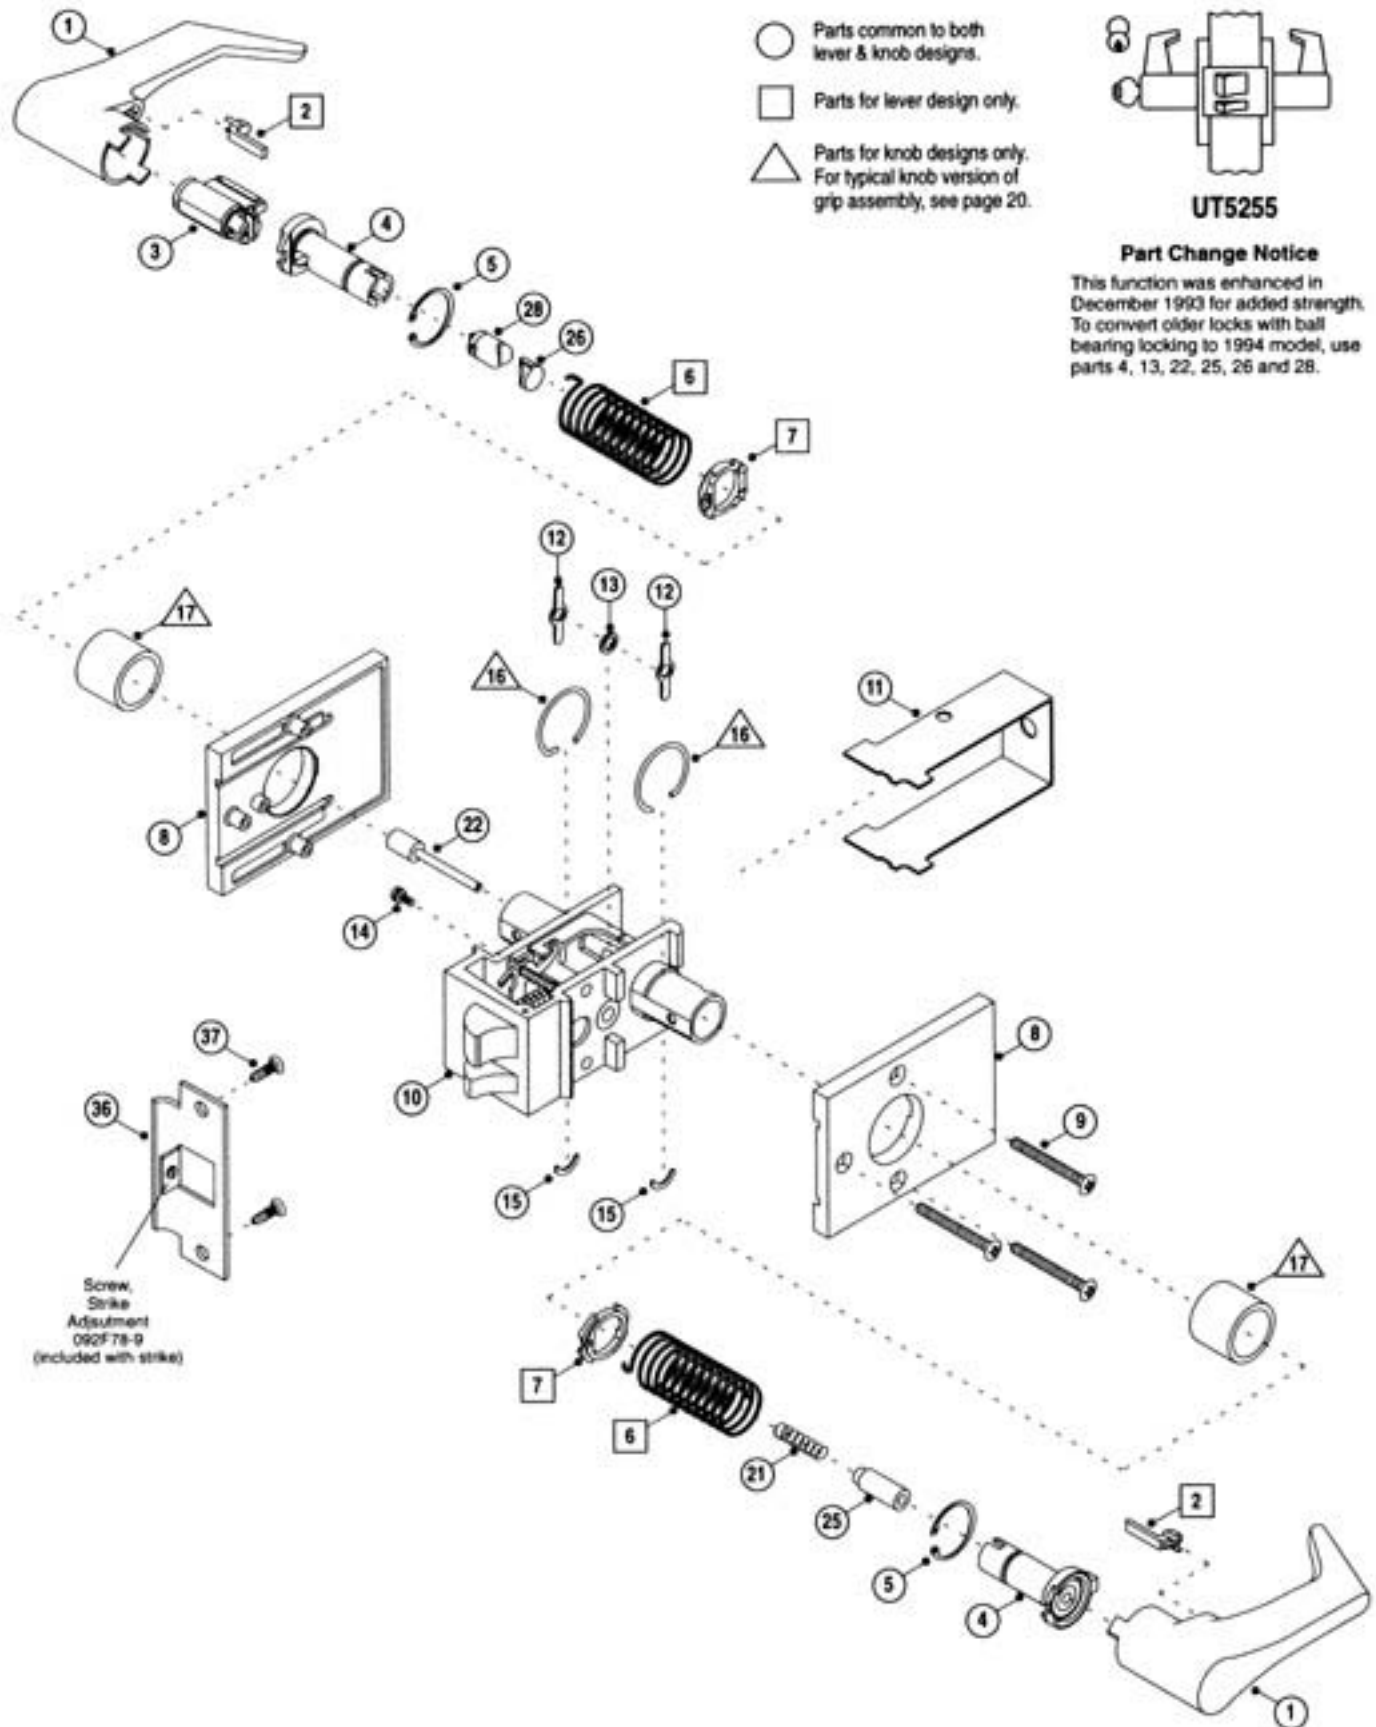

UT5257 - Storeroom or Closet

ITEM	PART NO.	SPECIFY	DESCRIPTION
1	(see chart below)		Lever or Knob; cylinder/button outside x plain inside
2	613F02-9		Lever Insert (gray)
3	2000-052	fin	Standard Cylinder (see page 23 for options)
4	188F75-8 102F19-8 187F07-8 060F91-8		Lever Shank, outside Lever Shank, inside Knob Shank, outside Knob Shank, inside
5	242F50-8 219F80-8		Shank Retainer for lever knob
6	103F44-8 103F45-8		Return Spring clockwise (RH) lever counter-clockwise (LH) lever
7	171F79-8		Return Spring Anchor
8	144F33 144F34 301F56-7 605F90 415F15 415F16 415F27-7 605F91	fin fin	Escutcheon (lever trim) inside inside outside, extended lip inside, lead lined option M28 Escutcheon (knob trim) inside outside outside, extended lip inside, lead lined option M28
9	222F85	fin	Mounting Screw


 

 
ITEM	PART NO.	SPECIFY	DESCRIPTION
10	496F32	fin	Chassis
11	138F88-8		Chassis Cover
12 a.	060F42-8		Hub
12 b.	071F63-8		Hub
12 c.	140F97-8		Hub
13	067F42-8		Hub Spacer
14	249F76-8		Screw, fixed escutcheon
15	078F07-8		Grip Retainer
16	078F08-8		Grip Retainer Ring
17	401F08	fin	Sleeve
21	249F77-3		Spindle Spring
22	335F96-8		Spindle
23	019F13-7		Spindle Drive Pin
24	019F11-7		Spindle Spring Seat
25	144F29-8		Plug Driver
36	236L75M020	fin	ANSI Strike (see page 23 for options)
37	480F70	fin	Screw Packet for strike

Levers (Specify Finish)

Note: Levers are handed.

RH lever: Clockwise rotation. For
outside of RH or RHR locks and
inside of LH or LHR locks.


LH lever: Counter-clockwise rotation. For
outside of LH or LHR locks and
inside of RH or RHR locks.

	Regular		Tactile Warning	
	Essex (RH) 	Essex (LH) 	Essex (RH) 	Essex (LH) 
Cylinder or Button	582F11-2	582F12-2	582F13-2	582F14-2
6-Pin IC	489F88-2	489F89-2	549F35-2	549F36-2
7-Pin IC	613F22-2	613F23-2	613F24-2	613F25-2
Plain	613F10-2	613F11-2	613F14-2	613F15-2

Knobs (Specify Finish)

	Regular		Tactile Warning	
	Global	Belmont	Global	Belmont
Cylinder or Button	383F65	406F32	575F57	575F63
6-Pin IC	482F75	438F79	577F54	577F59
Plain	383F66	406F33	575F58	575F64

UT5257 - Storeroom or Closet

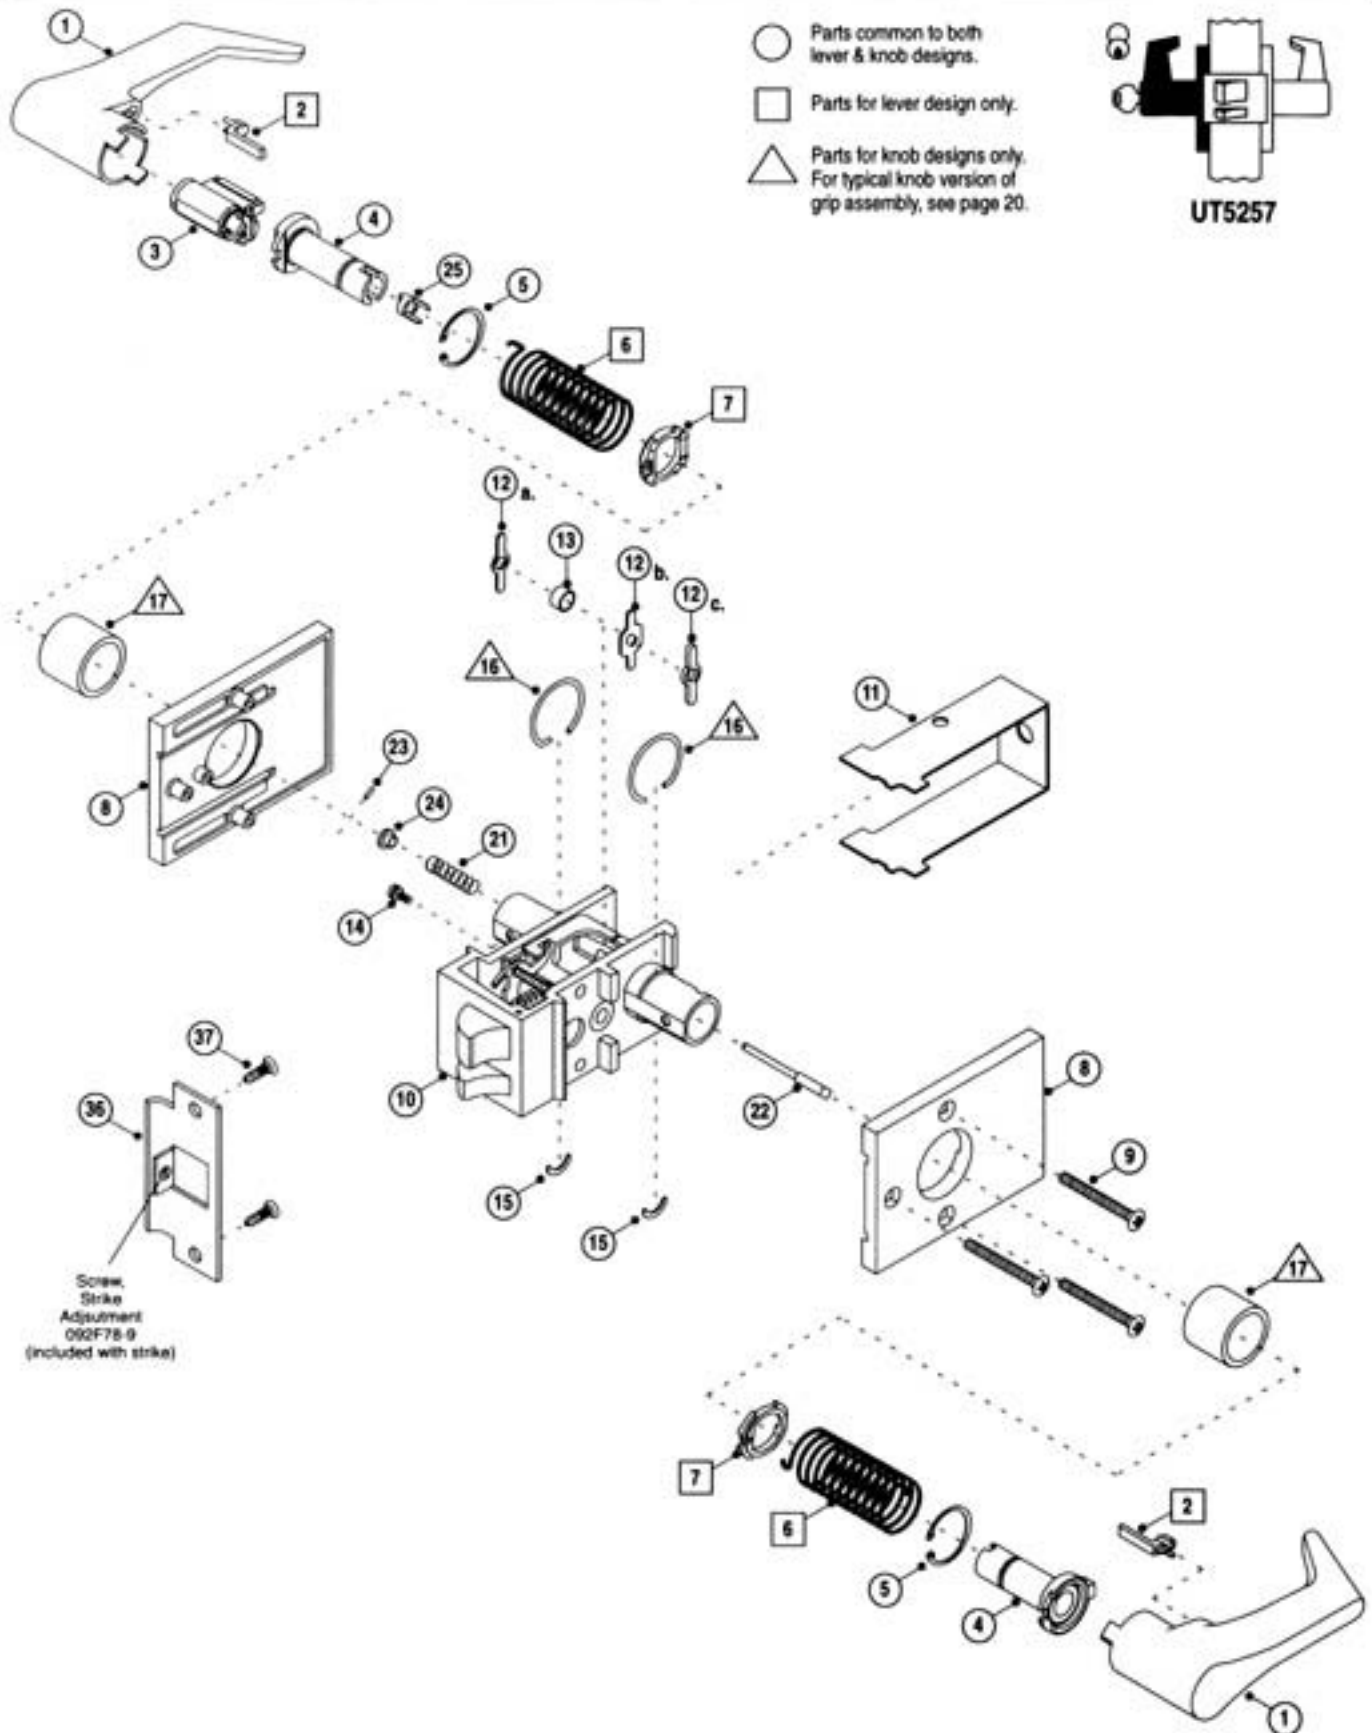

UT5261 - Entrance or Office (Levers Only)





ITEM	PART NO.	SPECIFY	DESCRIPTION	ITEM	PART NO.	SPECIFY	DESCRIPTION
1	(see chart below)		Lever; cylinder/button both sides	12 a.	060F42-8		Hub
2	613F02-9		Lever Insert (gray)	12 b.	208F80-8		Hub
3	2000-052	fin	Standard Cylinder (see page 23 for options)	13	060F33-8		Hub Spacer
4	156F64-8 156F65-8		Lever Shank, outside Lever Shank, inside	14	249F76-8		Screw, fixed escutcheon
5	242F50-8		Shank Retainer	15	078F07-8		Grip Retainer
6	103F44-8 103F45-8		Return Spring clockwise (RH) lever counter-clockwise (LH) lever	18	156F43	fin	Button Assy.
7	171F79-8		Return Spring Anchor	19	022F72-3		Button Spring
8	144F33 144F34 301F56-7 605F90	fin	Escutcheon inside inside outside, extended lip inside, lead lined option M28	20	060F05-3		Shoe Spring
9	222F85	fin	Mounting Screw	21	218F08-8		Spindle Spring
10	198F71	fin	Chassis	22	156F36-8		Spindle
11	138F88-8		Chassis Cover	27	156F83-7		Pin
				33	107F93-8		Spring
				34	019F15-2		Shank Sleeve
				36	236L75M020	fin	ANSI Strike (see page 23 for options)
				37	480F70	fin	Screw Packet for strike

Levers (Specify Finish)


Note: Levers are handed.

RH lever: Clockwise rotation. For outside of RH or RHR locks and inside of LH or LHR locks.

LH lever: Counter-clockwise rotation. For outside of LH or LHR locks and inside of RH or RHR locks.

	Regular		Tactile Warning	
	Essex (RH) 	Essex (LH) 	Essex (RH) 	Essex (LH) 
Cylinder or Button	582F11-2	582F12-2	582F13-2	582F14-2
6-Pin IC	489F88-2	489F89-2	549F35-2	549F36-2
7-Pin IC	613F22-2	613F23-2	613F24-2	613F25-2

UT5261 - Entrance or Office (Levers Only)

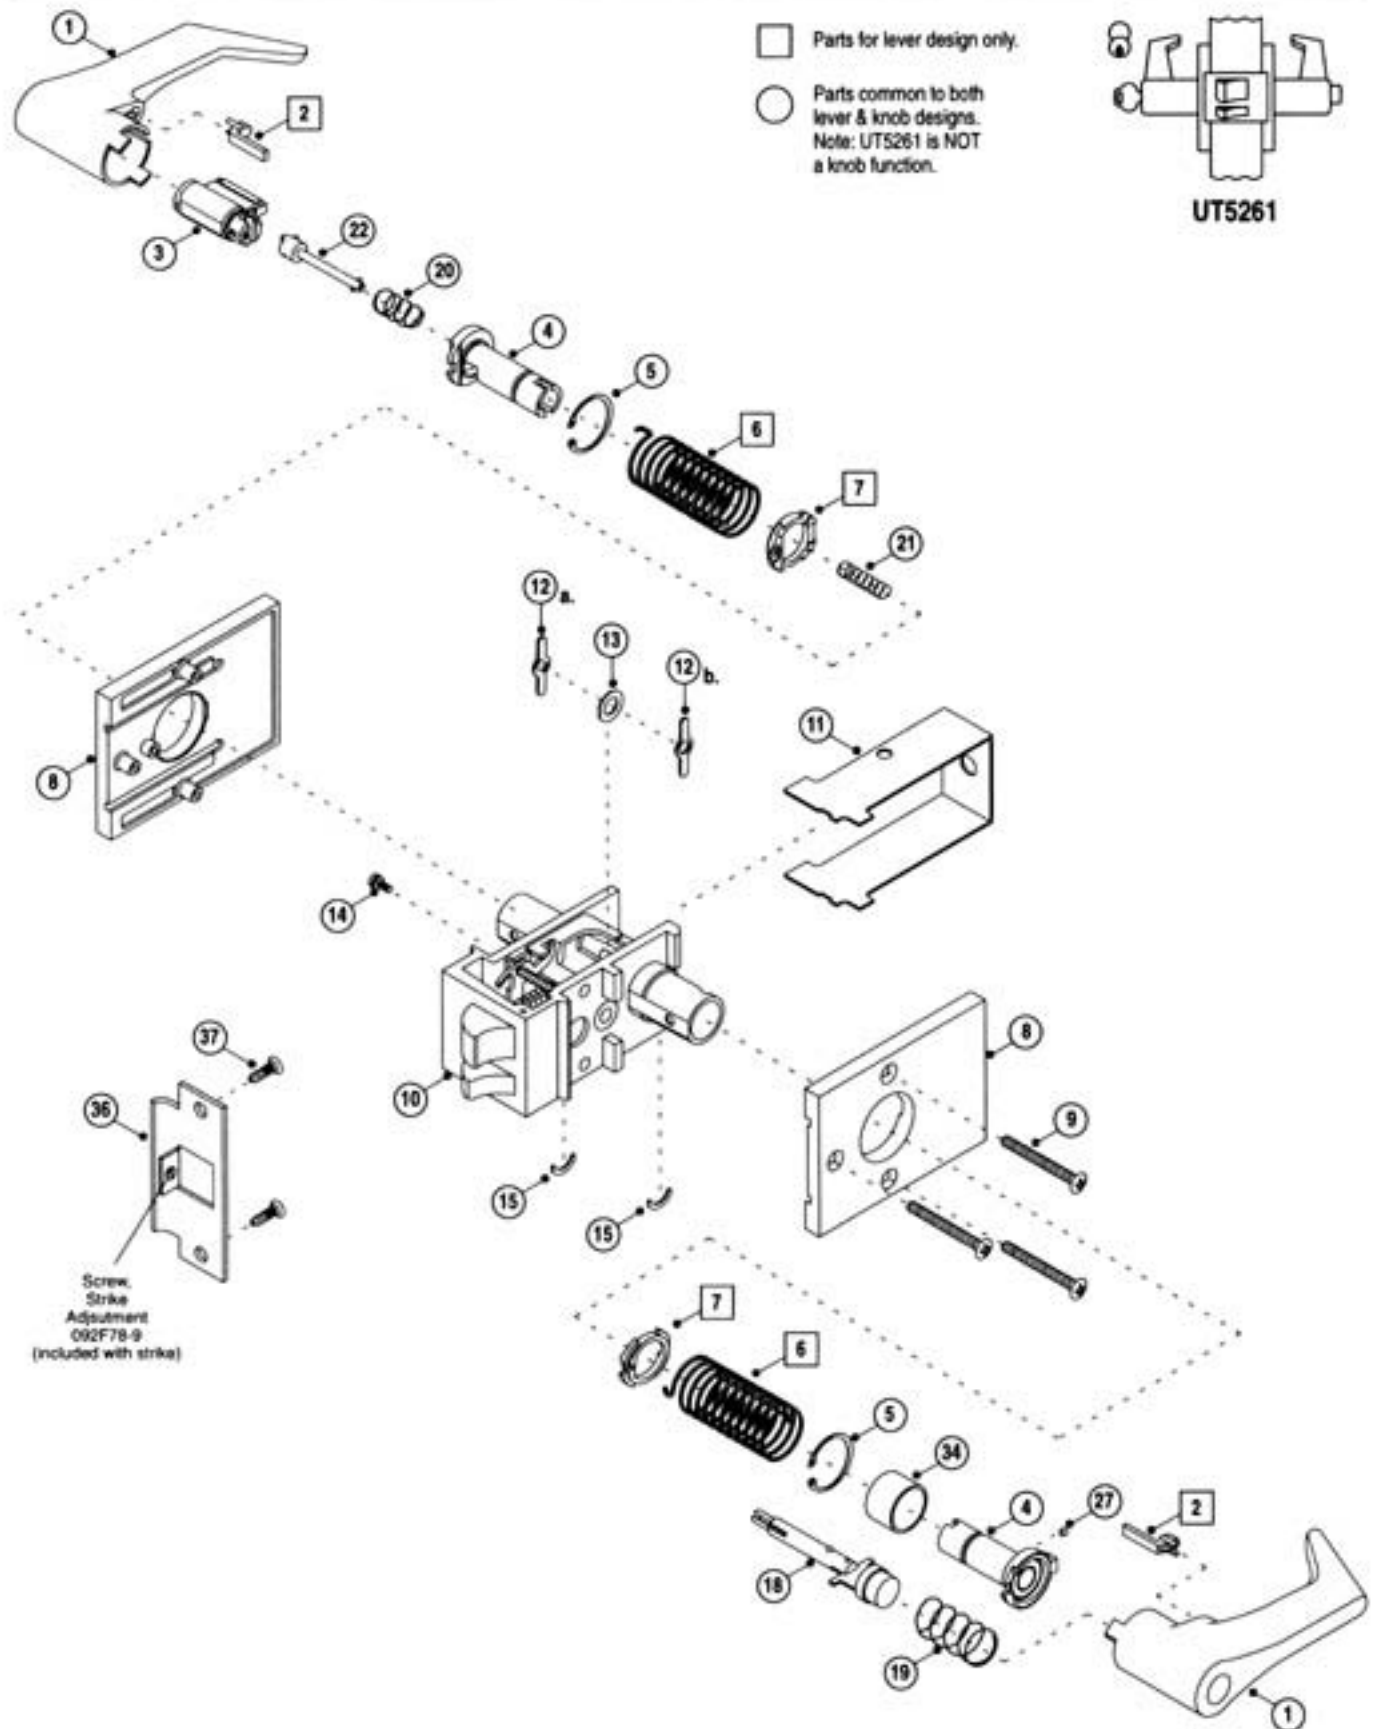

UT5272 - Apartment, Exit or Public Toilet

ITEM	PART NO.	SPECIFY	DESCRIPTION
1	(see chart below)		Lever or Knob; cylinder/button both sides
2	613F02-9		Lever Insert (gray)
3	2000-052	fin	Standard Cylinder (see page 23 for options)
4	188F75-8 188F73-8 147F08-8 187F07-8		Lever Shank, outside Lever Shank, inside Knob Shank, outside Knob Shank, inside
5	242F50-8 219F80-8		Shank Retainer for lever knob
6	103F44-8 103F45-8		Return Spring clockwise (RH) lever counter-clockwise (LH) lever
7	171F79-8		Return Spring Anchor
8	144F33 144F34 301F56-7 605F90 415F15 415F16 415F27-7 605F91	fin fin	Escutcheon (lever trim) inside inside outside, extended lip inside, lead lined option M28 Escutcheon (knob trim) inside outside outside, extended lip inside, lead lined option M28
9	222F85	fin	Mounting Screw





ITEM	PART NO.	SPECIFY	DESCRIPTION
10	496F32	fin	Chassis
11	138F88-8		Chassis Cover
12 a.	060F42-8		Hub
12 b.	140F97-8		Hub
12 c.	140F07-8		Hub
14	249F76-8		Screw, fixed escutcheon
15	078F07-8		Grip Retainer
16	078F08-8		Grip Retainer Ring
17	401F08	fin	Sleeve
21	249F77-3		Spindle Spring
22	144F30-8		Spindle
23	019F13-7		Spindle Drive Pin
24	019F11-7		Spindle Spring Seat
25	144F29-8		Plug Driver
26	205F61-8		Plug Driver Assy. Follower
28	168F81-8		Plug Driver Assy.
36	236L75M020	fin	ANSI Strike (see page 23 for options)
37	480F70	fin	Screw Packet for strike

Levers (Specify Finish)

Note: Levers are handed.

RH lever: Clockwise rotation. For
outside of RH or RHR locks and
inside of LH or LHR locks.

 
LH lever: Counter-clockwise rotation. For
outside of LH or LHR locks and
inside of RH or RHR locks.

	Regular		Tactile Warning	
	Essex (RH) 	Essex (LH) 	Essex (RH) 	Essex (LH) 
Cylinder or Button	582F11-2	582F12-2	582F13-2	582F14-2
6-Pin IC	489F88-2	489F89-2	549F35-2	549F36-2
7-Pin IC	613F22-2	613F23-2	613F24-2	613F25-2

Knobs (Specify Finish)

	Regular		Tactile Warning	
	Global	Belmont	Global	Belmont
Cylinder or Button	383F65	406F32	575F57	575F63
6-Pin IC	482F75	438F79	577F54	577F59

UT5272 - Apartment, Exit or Public Toilet

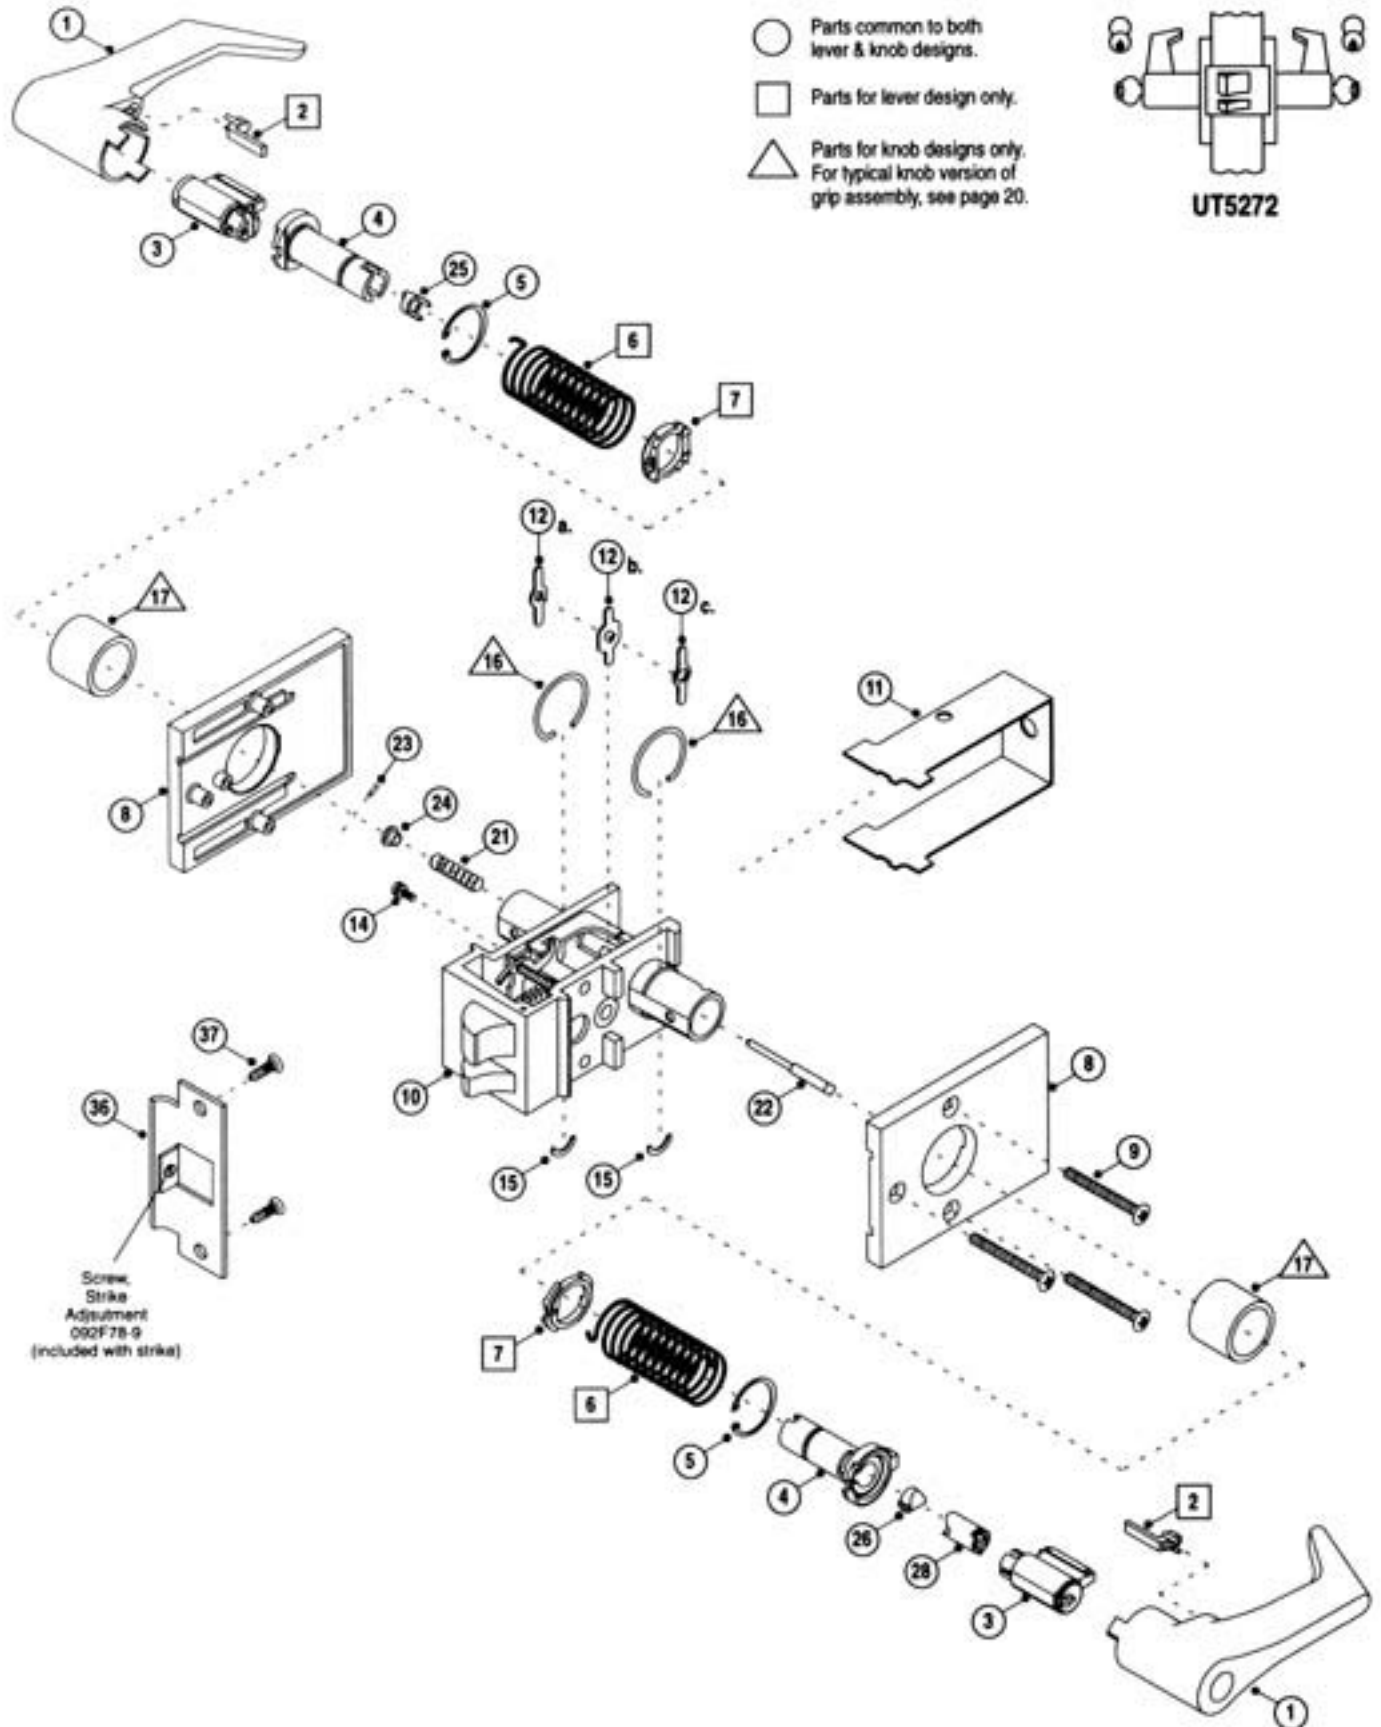

UT5282 - Store Door

ITEM	PART NO.	SPECIFY	DESCRIPTION
1	(see chart below)		Lever or Knob; cylinder/button both sides
2	613F02-9		Lever Insert (gray)
3	2000-052	fin	Standard Cylinder (see page 23 for options)
4	102F27-8 287F60-8 069F78-8 144F89-8		Lever Shank, outside Lever Shank, inside Knob Shank, outside Knob Shank, inside
5	242F50-8 219F80-8		Shank Retainer for lever knob
6	103F44-8 103F45-8		Return Spring clockwise (RH) lever counter-clockwise (LH) lever
7	171F79-8		Return Spring Anchor
8	144F33 144F34 301F56-7 605F90 415F15 415F16 415F27-7 605F91	fin fin	Escutcheon (lever trim) inside outside outside, extended lip inside, lead lined option M28 Escutcheon (knob trim) inside outside outside, extended lip inside, lead lined option M28





ITEM	PART NO.	SPECIFY	DESCRIPTION
9	222F85	fin	Mounting Screw
10	381F30	fin	Chassis
11	138F88-8		Chassis Cover
12	060F42-8		Hub
14	249F76-8		Screw, fixed escutcheon
15	078F07-8		Grip Retainer
16	078F08-8		Grip Retainer Ring
17	401F08	fin	Sleeve
21	261F11-8		Spindle Spring
25 a.	144F88-8		Plug Driver & Spindle Assy.
25 b.	145F32-8		Plug Driver
29	286F50-7		Pin
30	251F19-8		Retaining Ring
31	131F27-8		Coupling
32	194F22-8		Bushing
36	236L75M020	fin	ANSI Strike (see page 23 for options)
37	480F70	fin	Screw Packet for strike

Levers (Specify Finish)

Note: Levers are handed.

RH lever: Clockwise rotation. For
outside of RH or RHR locks and
inside of LH or LHR locks.


LH lever: Counter-clockwise rotation. For
outside of LH or LHR locks and
inside of RH or RHR locks.

	Regular		Tactile Warning	
	Essex (RH) 	Essex (LH) 	Essex (RH) 	Essex (LH) 
Cylinder or Button	582F11-2	582F12-2	582F13-2	582F14-2
6-Pin IC	489F88-2	489F89-2	549F35-2	549F36-2
7-Pin IC	613F22-2	613F23-2	613F24-2	613F25-2


Knobs (Specify Finish)

	Regular		Tactile Warning	
	Global	Belmont	Global	Belmont
Cylinder or Button	383F65	406F32	575F57	575F63
6-Pin IC	482F75	438F79	577F54	577F59


UT5282 - Store Door

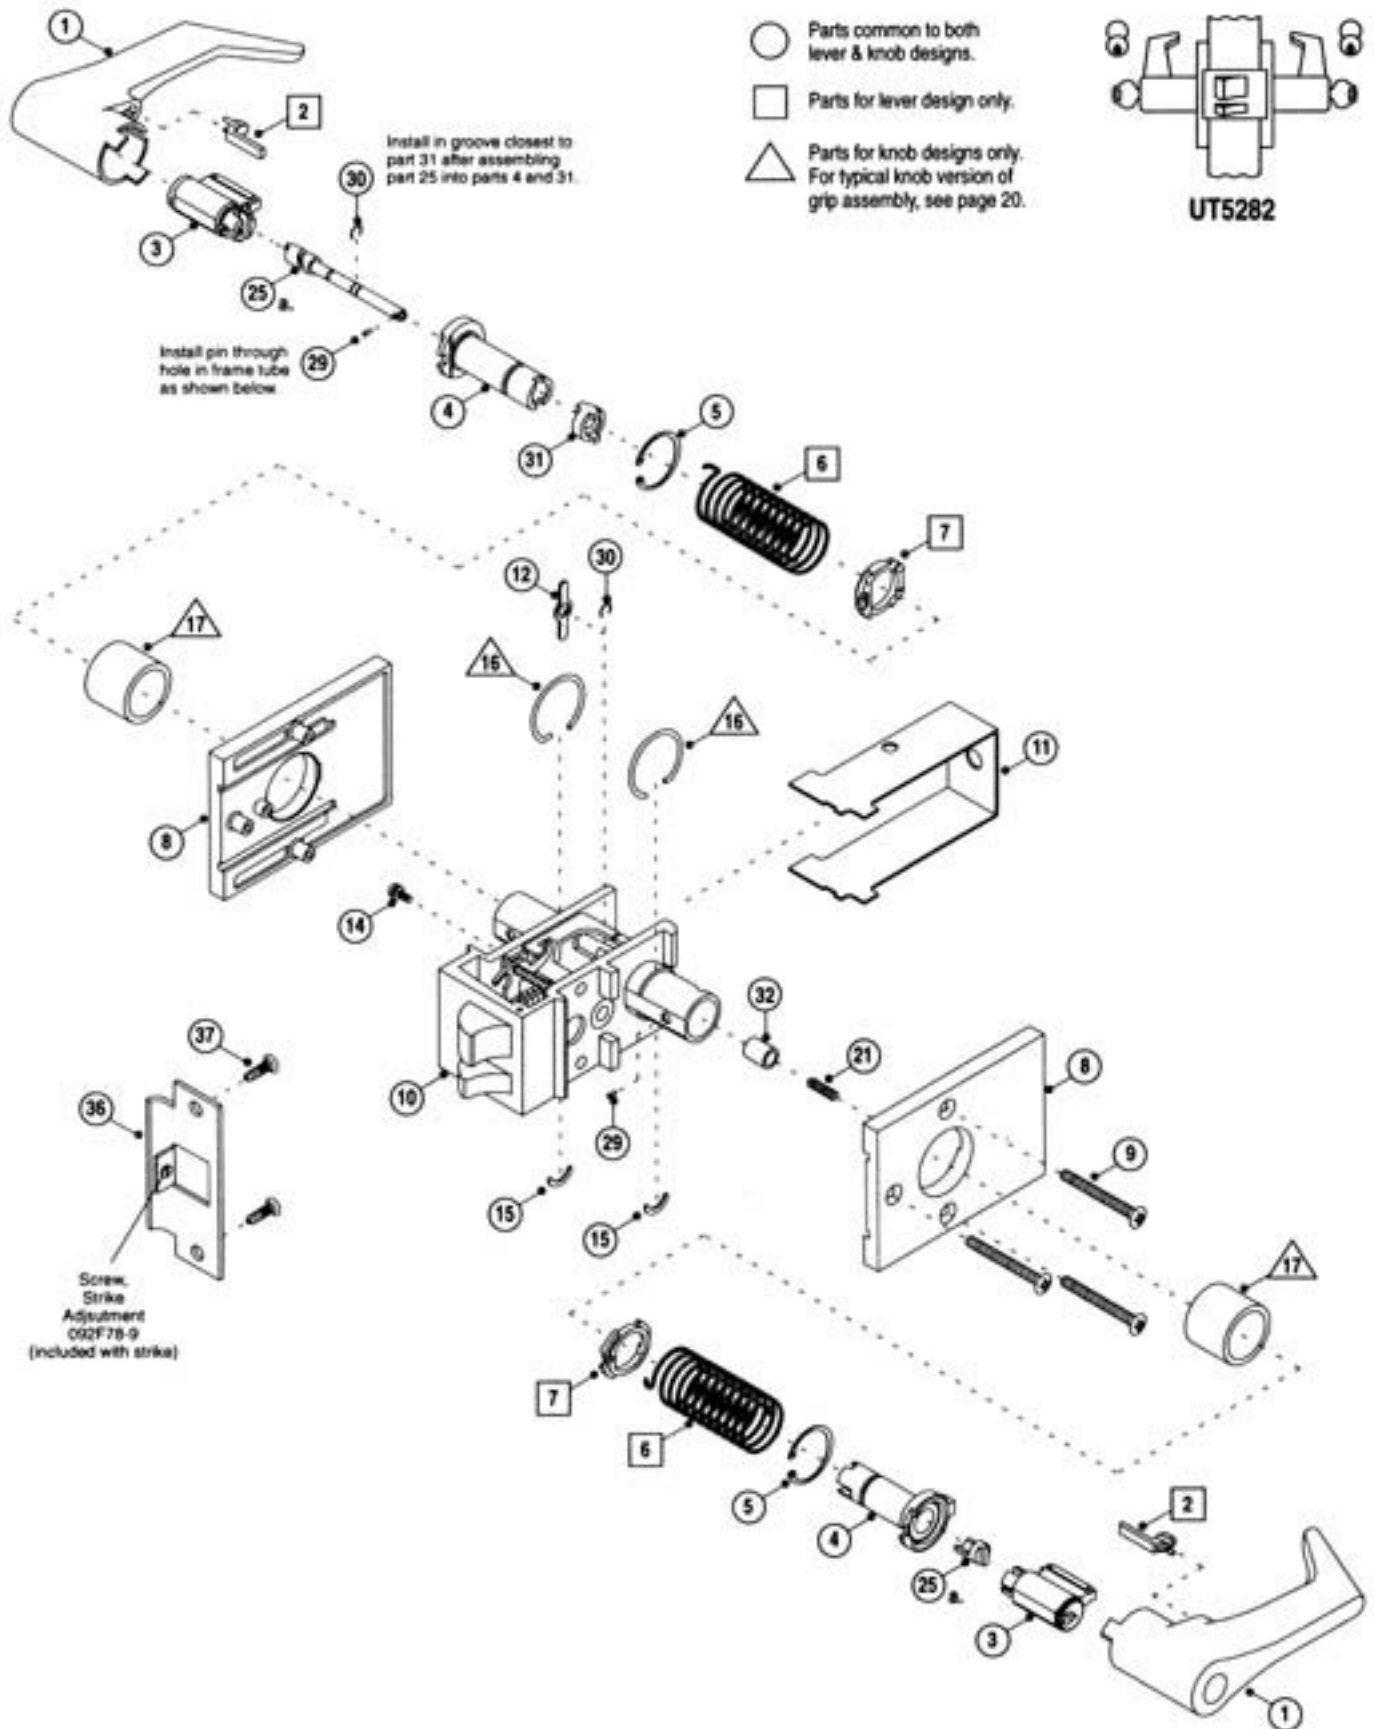

Typical Knob Configuration

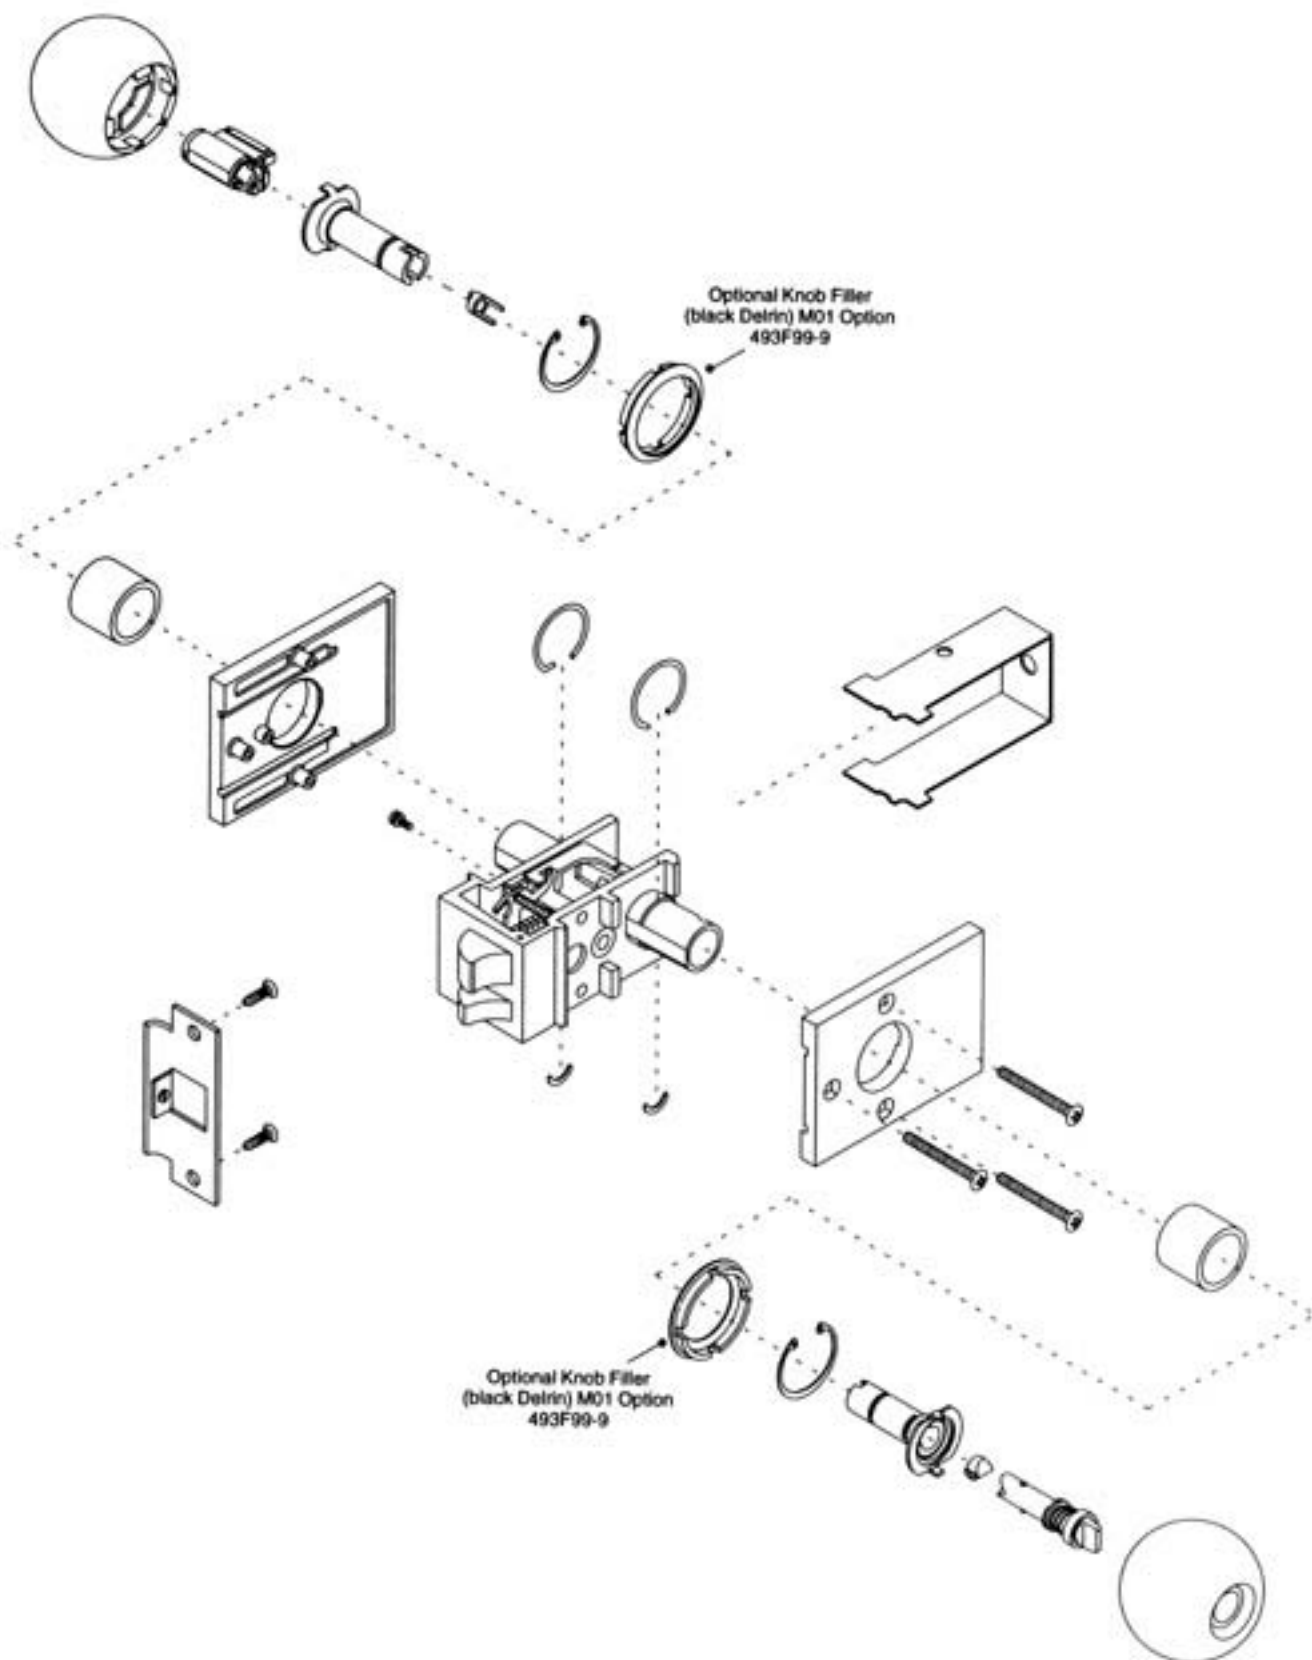

Interchangeable Core Configuration

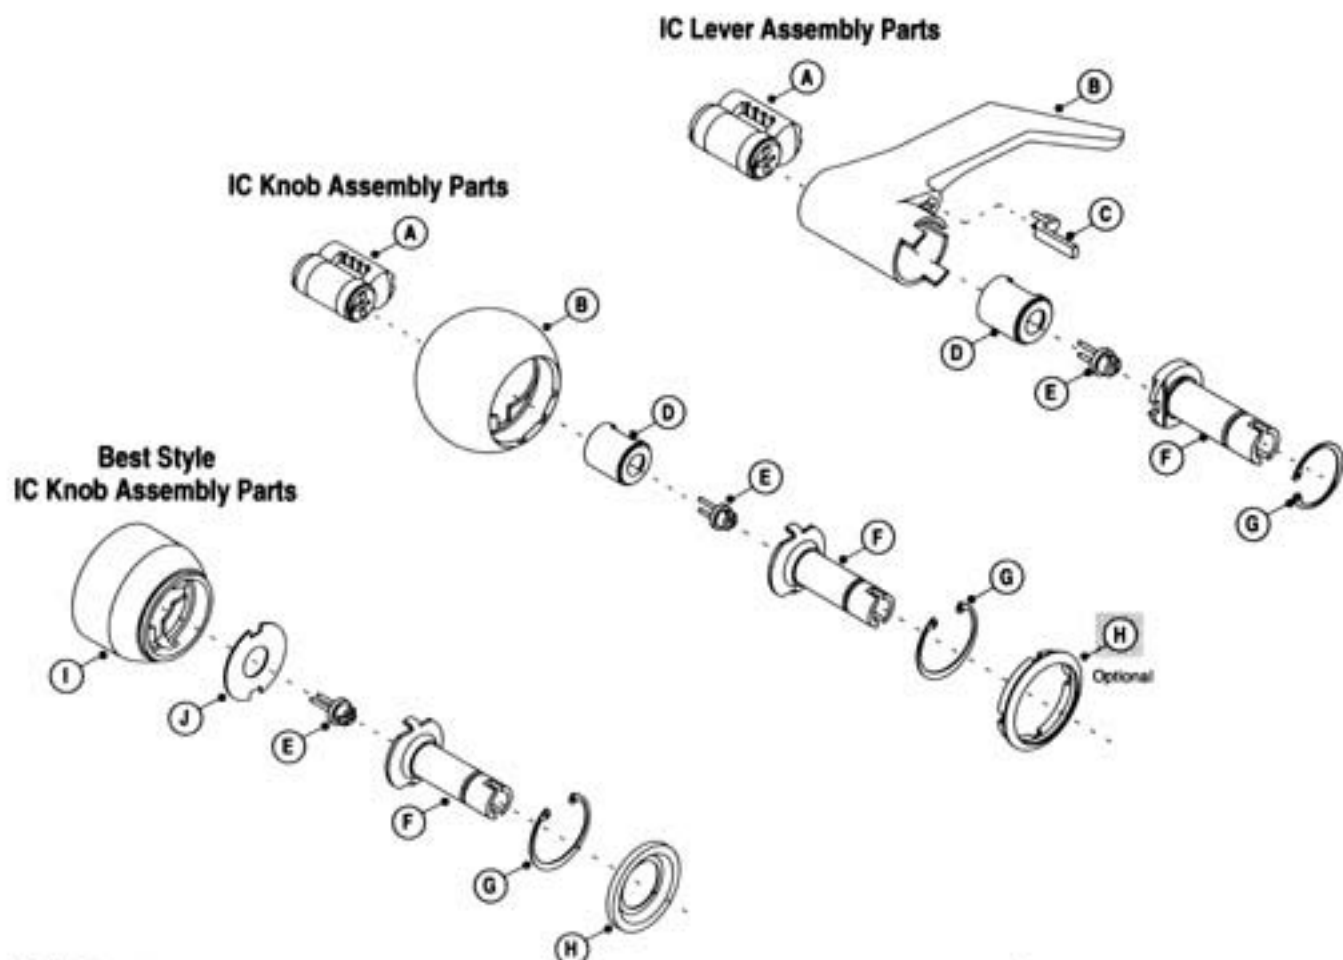

LEVERS (specify finish)

	Regular		Tactile Warning	
	Essex (RH)	Essex (LH)	Essex (RH)	Essex (LH)
6-Pin IC	489F88-2	489F89-2	549F35-2	549F36-2
7-Pin IC	613F22-2	613F23-2	613F24-2	613F25-2

KNOBS (specify finish)

	Regular		Tactile Warning	
	Global	Belmont	Global	Belmont
6-Pin IC	482F75	406F32	575F57	575F63

ITEM	PART NO.	SPECIFY	DESCRIPTION
(A)	8000 8010 8000-7	fin fin fin	6-Pin Core High Security Core 7-Pin Core
(B)	(see chart)	fin	Lever or Knob
(C)	613F02-9		Lever Insert (gray)
(D)	342F05-2 442F95-2		6-Pin IC Housing 7-Pin IC Housing (lever only)
(E)	342F03-2 320F44-2		Throw Member for Corbin Russwin core Best style core
(F)	(see pg. 22)		Lever or Knob Shank
(G)	242F50-8 219F80-8		Lever Shank Retainer Knob Shank Retainer
(H)	493F99-9 378F84	fin	Knob Filler for Corbin Russwin, black Delrin (M01 option) Best style Knob Filler
(I)	317F71-3 561F19-3	fin fin	Knob Only for 6 or 7-pin Best style core Knob Assembly (M10 option) for 6 or 7-pin Best style core Includes items: E, H, I and J. (Formerly S-15950)
(J)	317F68-8		Knob Plate

Lever and Knob Shank – Comparison Guide

Lever Shanks


Function	Outside	Inside
UT5210	102F19-8	102F19-8
UT5220	114F67-8	102F37-8
UT5251	188F75-8	188F73-8
UT5255	605F77-8	605F76-8
UT5257	188F75-8	102F19-8
UT5261	156F64-8	156F65-8
UT5272	188F75-8	188F73-8
UT5282	102F27-8	287F60-8



156F65-8



102F19-8

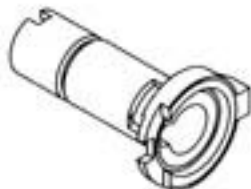

188F73-8




102F27-8




188F75-8



102F37-8

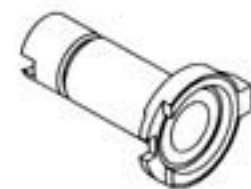

287F60-8

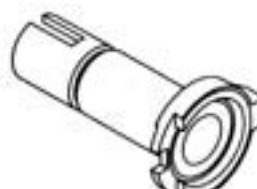

114F67-8



605F76-8




156F64-8




605F77-8

Knob Shanks

Function	Outside	Inside
UT5210	060F91-8	060F91-8
UT5220	202F33-8	133F41-8
UT5251	187F07-8	147F08-8
UT5255	605F80-8	605F81-8
UT5257	187F07-8	060F91-8
UT5261	N/A	N/A
UT5272	187F07-8	147F08-8
UT5282	069F78-8	144F89-8

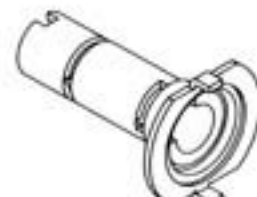

147F08-8

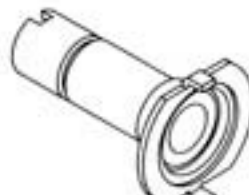


060F91-8



187F07-8



069F78-8

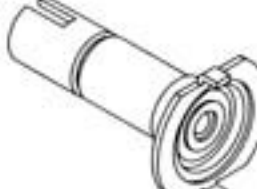

202F33-8




133F41-8



605F80-8





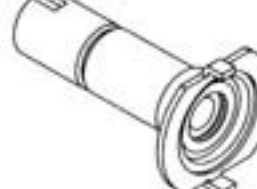

144F89-8






605F81-8

Options and Accessories


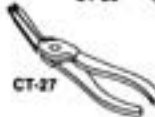

Strikes (Specify Finish)

	DESCRIPTION	PART NO.
 ANSI Curved Lip Strike  ANSI Straight Lip Strike for Pairs of Doors	ANSI Curved Lip Strike (standard), 1 ¹ / ₄ " lip to center	236L75M020
	ANSI Straight Lip Strike for Extended Lip Escutcheon, 1 ⁵ / ₁₆ " lip to center	610L43
	ANSI Straight Lip for Pairs of Doors	610L44
	Curved Lip Box Strike (lip length measured from back of strike to edge of lip) Lip Lengths:	
	2"	083L96M032
	2 ¹ / ₈ " (std.)	083L96M034
 Curved Lip Box Strike  Strike for Pairs of Doors	2 ¹ / ₄ "	083L96M036
	2 ¹ / ₂ "	083L96M040
	2 ³ / ₄ "	083L96M044
	3"	083L96M048
	Curved Lip Box Strike for Extended Lip Escutcheon, 1 ⁵ / ₁₆ " lip to center	293L14
	Strike for Pairs of Doors	082L67

Cylinders (Specify Finish)

	 Standard	 Interchangeable Core	 Master Ring
Conventional 6-Pin	2000-052	8000	2060-052
Conventional 7-Pin	N/A	8000-7	N/A
High Security	2010-052	8010	N/A

Waldes Tru-Arc Pliers

	DESCRIPTION	PART NO.
 CT-25	For removing and installing large shank retaining ring to gain access to cylinder of knob locksets	CT-25
 CT-27	For removing and installing the shank retaining ring of lever locksets	CT-27
	For installing small retainer on spindle of UT5282 (Waldes applicator # E-015)	301F59-8

Miscellaneous

DESCRIPTION	PART NO.
Delrin Insert (black) – Option M01	493F99
Spanner Head Screws (specify finish) – Option M02	223F29-9 (fin)

Cross Reference for Lockset Parts

(Parts cross reference does not include parts for product and cylinder options.)

ITEM	PART NO.	DESCRIPTION	UT5210	UT5220	UT5251	UT5255	UT5257	UT5261	UT5272	UT5282
①		Lever or Knob	SEE PARTS LIST							
②	613F02-9	Lever Insert (gray)	•	•	•	•	•	•	•	•
③	2000-052	Standard Cylinder			•	•	•	•	•	•
④	060F91-8	Knob Shank	•				•			
	069F78-8	Knob Shank, outside								•
	102F19-8	Lever Shank	•				•			
	102F27-8	Lever Shank, outside								•
	102F37-8	Lever Shank, inside		•						
	114F67-8	Lever Shank, outside		•						
	133F41-8	Knob Shank, inside		•						
	144F89-8	Knob Shank, inside								•
	147F08-8	Knob Shank, inside			•				•	
	156F64-8	Lever Shank, outside						•		
	156F65-8	Lever Shank, inside						•		
	187F07-8	Knob Shank, outside			•		•		•	
	188F73-8	Lever Shank, inside			•				•	
	188F75-8	Lever Shank, outside			•		•		•	
	202F33-8	Knob Shank, outside		•						
	287F60-8	Lever Shank, inside								•
	605F76-8	Lever Shank, inside				•				
	605F77-8	Lever Shank, outside				•				
	605F80-8	Knob Shank, outside				•				
	605F81-8	Knob Shank, inside				•				
⑤	219F80-8	Shank Retainer for knob	•	•	•	•	•		•	•
	242F50-8	Shank Retainer for lever	•	•	•	•	•	•	•	•
⑥	103F44-8	Return Spring clockwise (RH) lever	•	•	•	•	•	•	•	•
	103F45-8	Return Spring ctr.-clockwise (LH) lever	•	•	•	•	•	•	•	•
⑦	171F79-8	Return Spring Anchor	•	•	•	•	•	•	•	•
⑧	144F33	Escutcheon (lever) inside	•	•	•	•	•	•	•	•
	144F34	Escutcheon (lever) outside	•	•	•	•	•	•	•	•
	415F15	Escutcheon (knob) inside	•	•	•	•	•		•	•
	415F16	Escutcheon (knob) outside	•	•	•	•	•		•	•

Cross Reference for Lockset Parts

(Parts cross reference does not include parts for product and cylinder options.)

ITEM	PART NO.	DESCRIPTION	UT5210	UT5220	UT5251	UT5255	UT5257	UT5261	UT5272	UT5282
9	222F85	Mounting Screw	•	•	•	•	•	•	•	•
10	198F71	Chassis						•		
	381F30	Chassis								•
	496F32	Chassis			•	•	•		•	
	496F33	Chassis	•							
	496F34	Chassis		•						
11	138F88-8	Chassis Cover	•	•	•	•	•	•	•	•
12	060F42-8	Hub	•	•	•		•	•	•	•
	071F62-8	Hub		•						
	071F63-8	Hub					•			
	081F77-8	Hub		•						
	140F07-8	Hub			•	•			•	
	140F97-8	Hub			•		•		•	
	208F80-8	Hub						•		
13	060F33-8	Hub Spacer	•					•		
	067F42-8	Hub Spacer					•			
	070F42-8	Hub Spacer		•						
	070F43-8	Hub Spacer		•						
	606F03-8	Hub Spacer				•				
14	249F76-8	Screw, fixed escutcheon	•	•	•	•	•	•	•	•
15	078F07-8	Grip Retainer	•	•	•	•	•	•	•	•
16	078F08-8	Grip Retainer Ring	•	•	•	•	•		•	•
17	401F08	Sleeve	•	•	•	•	•		•	•
18	022F80	Button Assembly		•						
	156F43	Button Assembly						•		
	157F11	Button Assembly			•					
19	022F72-3	Button Spring		•				•		
20	060F05-3	Shoe Spring		•				•		
21	071F67-3	Spindle Spring		•						
	218F08-8	Spindle Spring						•		
	261F11-8	Spindle Spring								•
	249F77-3	Spindle Spring			•	•	•		•	

Cross Reference for Lockset Parts

(Parts cross reference does not include parts for product and cylinder options.)



ITEM	PART NO.	DESCRIPTION	UT5210	UT5220	UT5251	UT5255	UT5257	UT5261	UT5272	UT5282
22	144F30-8	Spindle			•				•	
	156F36-8	Spindle						•		
	201F18-8	Spindle		•						
	335F98-8	Spindle					•			
	606F02-8	Spindle				•				
23	019F13-7	Spindle Drive Pin			•		•		•	
24	019F11-7	Spindle Spring Seat			•		•		•	
25	144F29-8	Plug Driver			•		•		•	
	144F88-8	Plug Driver & Spindle Assy.								•
	145F32-8	Plug Driver								•
	606F01-8	Plug Driver				•				
26	205F61-8	Plug Driver Assy. Follower			•	•			•	
27	156F83-7	Pin						•		
28	168F81-8	Plug Driver Assy.				•			•	
29	286F50-7	Pin								•
30	251F19-8	Retaining Ring								•
31	131F27-8	Coupling								•
32	194F22-8	Bushing								•
33	107F93-8	Spring						•		
34	019F15-2	Shank Sleeve						•		
35	398F43-8	Emergency Key		•						
36	236L75M020	ANSI Strike	•	•	•	•	•	•	•	•
37	480F70	Screw Packet for strike	•	•	•	•	•	•	•	•

Routine Maintenance

Periodic adjustment and maintenance will substantially lengthen the life of the lockset and ensure the best possible trouble-free operation.

Time frames in the following maintenance items are based on normal frequency of operation. For high traffic or high abuse applications, perform suggested maintenance more frequently.

If you have questions regarding installation or adjustment, contact an authorized Corbin Russwin distributor or local sales representative.

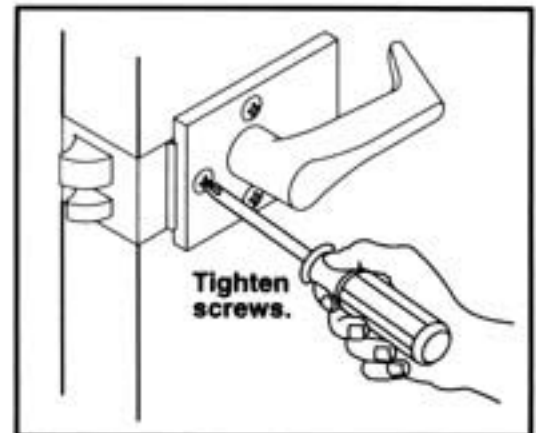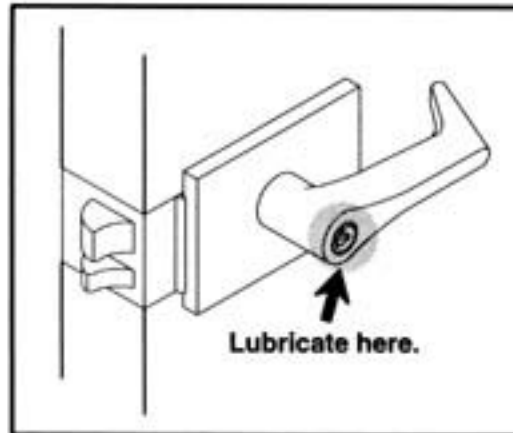

☒ LUBRICATE CYLINDER

Lubricate (conventional) cylinder with *small* amount of powdered graphite or molybdenum disulfide every six months. Petroleum based liquid spray lubricants such as WD-40™ and LPS-1™ should only be used in cylinders in harsh or corrosive environments and should never be mixed with the aforementioned dry lubricants. For high security cylinder, use Poxylube™ spray.

☒ LUBRICATE MOVING PARTS

Lubricate moving parts of inside and outside chassis with a small amount of grease or other petroleum lubricant every two years.






☒ TIGHTEN SCREWS

Check lockset for secure fastening to door once a year. Tighten throughbolts as needed.

☒ CARE FOR LEVERSET FINISH

Clean leverset using only a soft, damp cloth. Using lacquer thinners, caustic soaps, abrasive cleaners or polishes could damage the coating, resulting in tarnishing.

Troubleshooting Guide

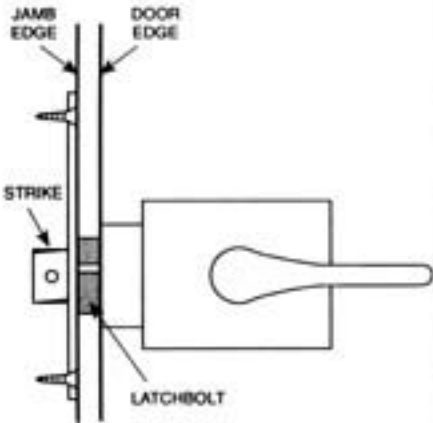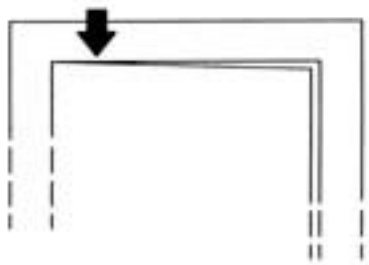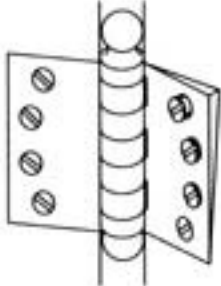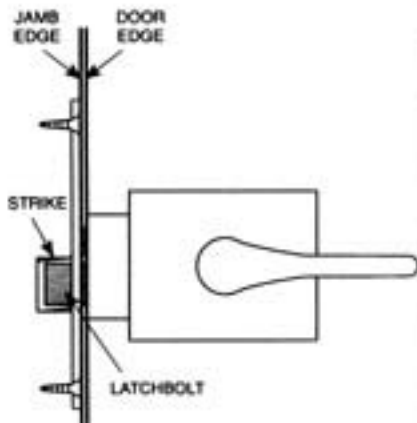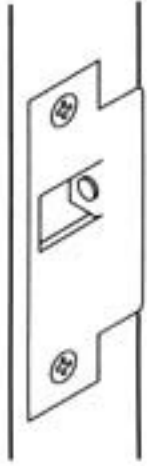
PROBLEM	SOLUTIONS
<p>1. Latchbolt does not engage or binds in strike.</p>  <p>(Incorrect Positioning)</p>	<p>A. Make sure door and frame are plumb and door is not binding in frame.</p>  <p>B. Are hinges tight? Fill holes if necessary, or rehang door if screws will not hold.</p> 
 <p>(Correct Positioning)</p>	<p>C. Has door or frame warped or shifted? Remove strike and adjust nylon stop screw to compensate for this condition horizontally. File top or bottom of latch hole to compensate for vertical misalignment. In extreme cases, you may need to shim or reposition strike.</p> 
	<p>D. Is door or frame sagging? If door and frame cannot be returned to plumb relationship, planing or shaving door and repositioning or shimming strike may help.</p>

Troubleshooting Guide

PROBLEM	SOLUTIONS
<p>2. Key operates with difficulty.</p>	<p>A. Is latch binding due to door sag or missalignment of latch and strike? (See 1A and 1C.)</p> <p>B. Are silencers correct size?</p> <p>C. Is weatherstripping causing latch to bind?</p> <p>D. Lubricate keyway. Do not use petroleum products. Apply powdered graphite to key and move slowly in and out. For high security cylinders, spray Poxylube™ into keyway and move key in and out.</p> <p>E. Key may be cut out of tolerance. Use calipers or micrometer to check key against specifications in Corbin Russwin Cylinder Manual. Replace key if necessary.</p> <p>F. Cylinder may be improperly combined. Dismantle cylinder (locksmith only!), measure all pins and compare to published factory specifications. Recombine if necessary.</p>
<p>3. Latchbolt does not deadlock.</p>	<p>A. Is strike out of line or is gap between door and jamb too great?</p> <p>B. Realign strike or shim strike out towards flat area of latchbolt.</p> <div data-bbox="737 1129 1419 1541"> </div> <p>(If strike is correctly aligned, latchbolt will deadlock)</p>

Cylinder Removal Instructions (Current Model)

Lever Version

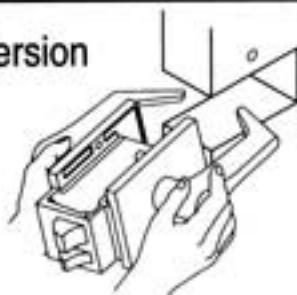

Refer to illustration on page 31.

Tools needed: CT-27 pliers (see page 23), small flat blade screwdriver, offset or standard phillips screwdriver, and spare lever return spring(s) of proper hand for lever(s) to be rekeyed. Original return spring must often be destroyed to remove it.

1. Remove all visible screws from escutcheons. Push outside escutcheon away from door surface to clear lugs. Pull lock from edge of door.
2. If lockset function permits, unlock lever with button inside or key.
3. Remove chassis cover. Gently pry edges loose with small screwdriver while pulling cover away from chassis.
4. Door hand and bevel determine which escutcheon is fixed.

If outside escutcheon is loose, pry lever stop away from frame to expose crescent-shaped lever retainer in slot of frame tube. Using small screwdriver, pry retainer out of slot.

If outside escutcheon is fixed, use offset screwdriver to remove phillips head screw, either from inside of frame or by using access hole in opposite frame wall.

If no offset screwdriver is available, loose escutcheon and opposite lever must be removed to expose access hole in opposite frame wall for standard phillips screwdriver. With screw removed and escutcheon now loose, pry lever stop away from frame to expose crescent-shaped lever retainer in slot of frame tube. Using small screwdriver, pry retainer out of slot.

5. For all functions except UT5282 (store door), skip to step 6. For UT5282, remove small retainer (item #30 on exploded view page). This can be challenging, so be patient. With small screwdriver, rotate retainer around spindle until its opening is in position of easiest access. Use second small screwdriver with first screwdriver to spread retainer and remove it from spindle.

6. Pull lever handle, return spring and spring anchor off frame. Since spring is wound, rotate lever in appropriate direction to unwind spring. Remove lever stop from spring.
7. Note orientation of hooks on ends of spring in illustration. One hook is engaged in slot in shank. Twist and "snap" spring to disengage it; then remove it. If spring bends or deforms, it must be replaced on reassembly. Since spring and lever are both handed, set them aside together.
8. Remove gray insert from lever, (see illustration). Using Waldes Tru-Arc pliers (Cat. No. CT-27), remove retaining ring from groove inside lever. Remove shank, plug driver and cylinder.

To Reassemble


1. Insert cylinder into lever. Be sure plug head seats properly in lever. Insert lever shank, making sure locating tab on shank flange aligns with slot in lever.
2. Install Waldes ring, beveled side up, into groove inside lever. Shank and cylinder must be seated properly to ensure proper engagement of Waldes ring. Rotate Waldes ring so opening aligns with notch in shank flange. Opening must be clear to accept hook of return spring in Step 3.
3. Install gray insert into lever. Insert lever return spring, large hook down, into slot in shank and twist spring to lock hook into place.
4. Place escutcheon onto lever and shank. Insert short hook of spring into slot of lever stop. Holding lever, spring and lever stop

together with escutcheon, slide lever shank into frame tube. Align flat on inside of spring anchor with flat on frame tube. Wind spring one turn in appropriate direction, depending on hand. Push lever and shank assembly into frame tube until groove milled into lever shank aligns with slot in frame tube.

4. Press lever retainer firmly into slot. Be sure retainer seats completely to secure shank to frame tube. Stake lever retainer into frame tube slot by tapping screwdriver or punch into frame tube next to retainer. Caution: too much force may deform tube and prevent smooth lever operation.
5. If both levers were removed, reinstall second lever, repeating steps 4 and 5.

6. For all functions except UT5282 (store door), proceed to step 8. For UT5282, small retainer removed in step 2 must be reinstalled. This can be very difficult without Waldes ring applicator.
7. If outside escutcheon is to be fixed, use long nose pliers to start phillips screw through frame into escutcheon. Using offset screwdriver, tighten screw making sure escutcheon is properly seated on frame.
8. Test operation of all keys, buttons and levers. Install chassis cover and throughbolts.

Cylinder Removal Instructions (Current Model)

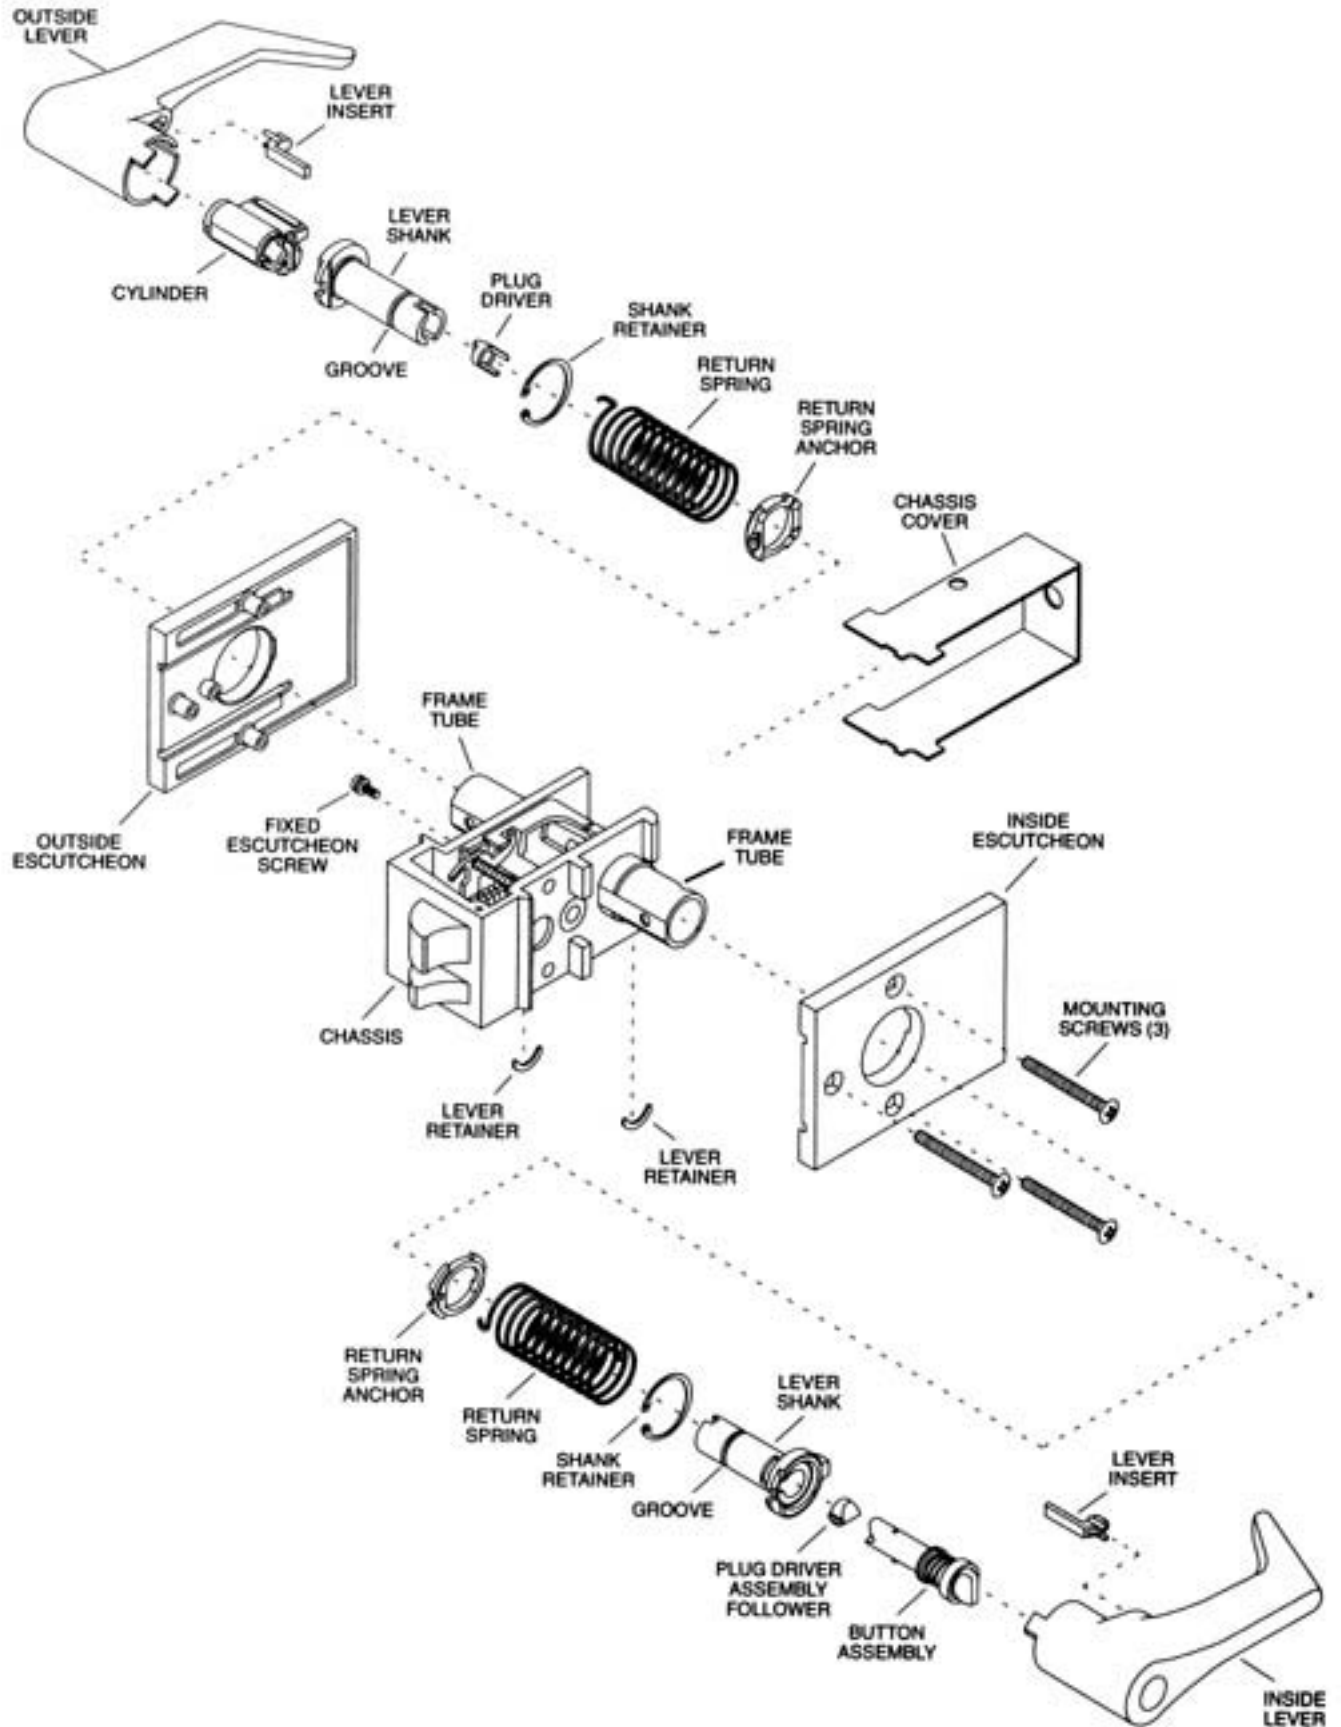

Cylinder Removal Instructions (Current Model)

Knob Version

Horizontal Keyway Locksets Only
For locksets with vertical keyway,
see pages



Refer to illustration on page 33.

Tools needed: CT-25 pliers, small flat blade screwdriver and offset or standard phillips screwdriver.

For UT5282 only: Waldes applicator E-015 (301F59-8) see page 23.

1. Remove all visible screws from escutcheons. Push outside escutcheon away from door surface to clear lugs. Pull lock from edge of door.
2. If lockset function permits, unlock knob with button inside or key.
3. Remove chassis cover. Gently pry edges loose with small screwdriver while pulling cover away from chassis.
4. Door hand and bevel determine which escutcheon is fixed.
If outside escutcheon is loose, pry wire retainer ring off to expose crescent-shaped knob retainer in slot of frame tube. Using small screwdriver, pry retainer out of slot.


If outside escutcheon is fixed, use offset screwdriver to remove phillips head screw, either from inside of frame or by using access hole in opposite frame wall. If no offset screwdriver is available, loose escutcheon and opposite knob must be removed to expose access hole in opposite frame wall for standard phillips screwdriver. With screw removed and escutcheon now loose, pry wire retainer ring off to expose crescent-shaped knob retainer in slot of frame tube. Using small screwdriver, pry retainer out of slot.

5. For all functions except UT5282 (store door), skip to step 6. For UT5282, remove small retainer (item #30 on exploded view page). This can be challenging, so be patient. With small screwdriver, rotate retainer around spindle until its opening is in position of easiest access. Use second small screwdriver with first screwdriver to spread retainer and remove it from spindle.
6. Remove knob assembly.
7. Using Waldes Tru-Arc pliers (Cat. No. CT-25), remove large retaining ring from groove inside knob. Remove shank, plug driver and cylinder.

To Reassemble

1. Insert cylinder into knob. Be sure plug head seats properly in hole. Insert knob shank.
2. Install Waldes ring, beveled side up, into groove inside knob.
3. Slip retaining ring over frame tube. Place escutcheon onto knob and shank. Push knob and shank assembly into frame tube until slot milled into knob shank aligns with slot in frame tube. Press crescent-shaped knob retainer firmly into slot. Be sure retainer seats completely to secure shank to frame tube.
4. Snap wire ring into position over knob retainer.
5. If outside escutcheon is to be fixed, use long nose pliers to start phillips screw through frame into escutcheon. Using offset screwdriver, tighten screw making sure escutcheon is properly seated on frame.
6. If both knobs were removed, reinstall other knob repeating steps 3 and 4.
7. For all functions except UT5282 (store door), proceed to step 8. For UT5282, small retainer removed in step 5 (above) must be reinstalled. This can be very difficult without Waldes ring applicator 301F59-8.
8. Test all operation of keys, buttons and knobs. Install chassis cover and throughbolts.

Cylinder Removal Instructions (Current Model)

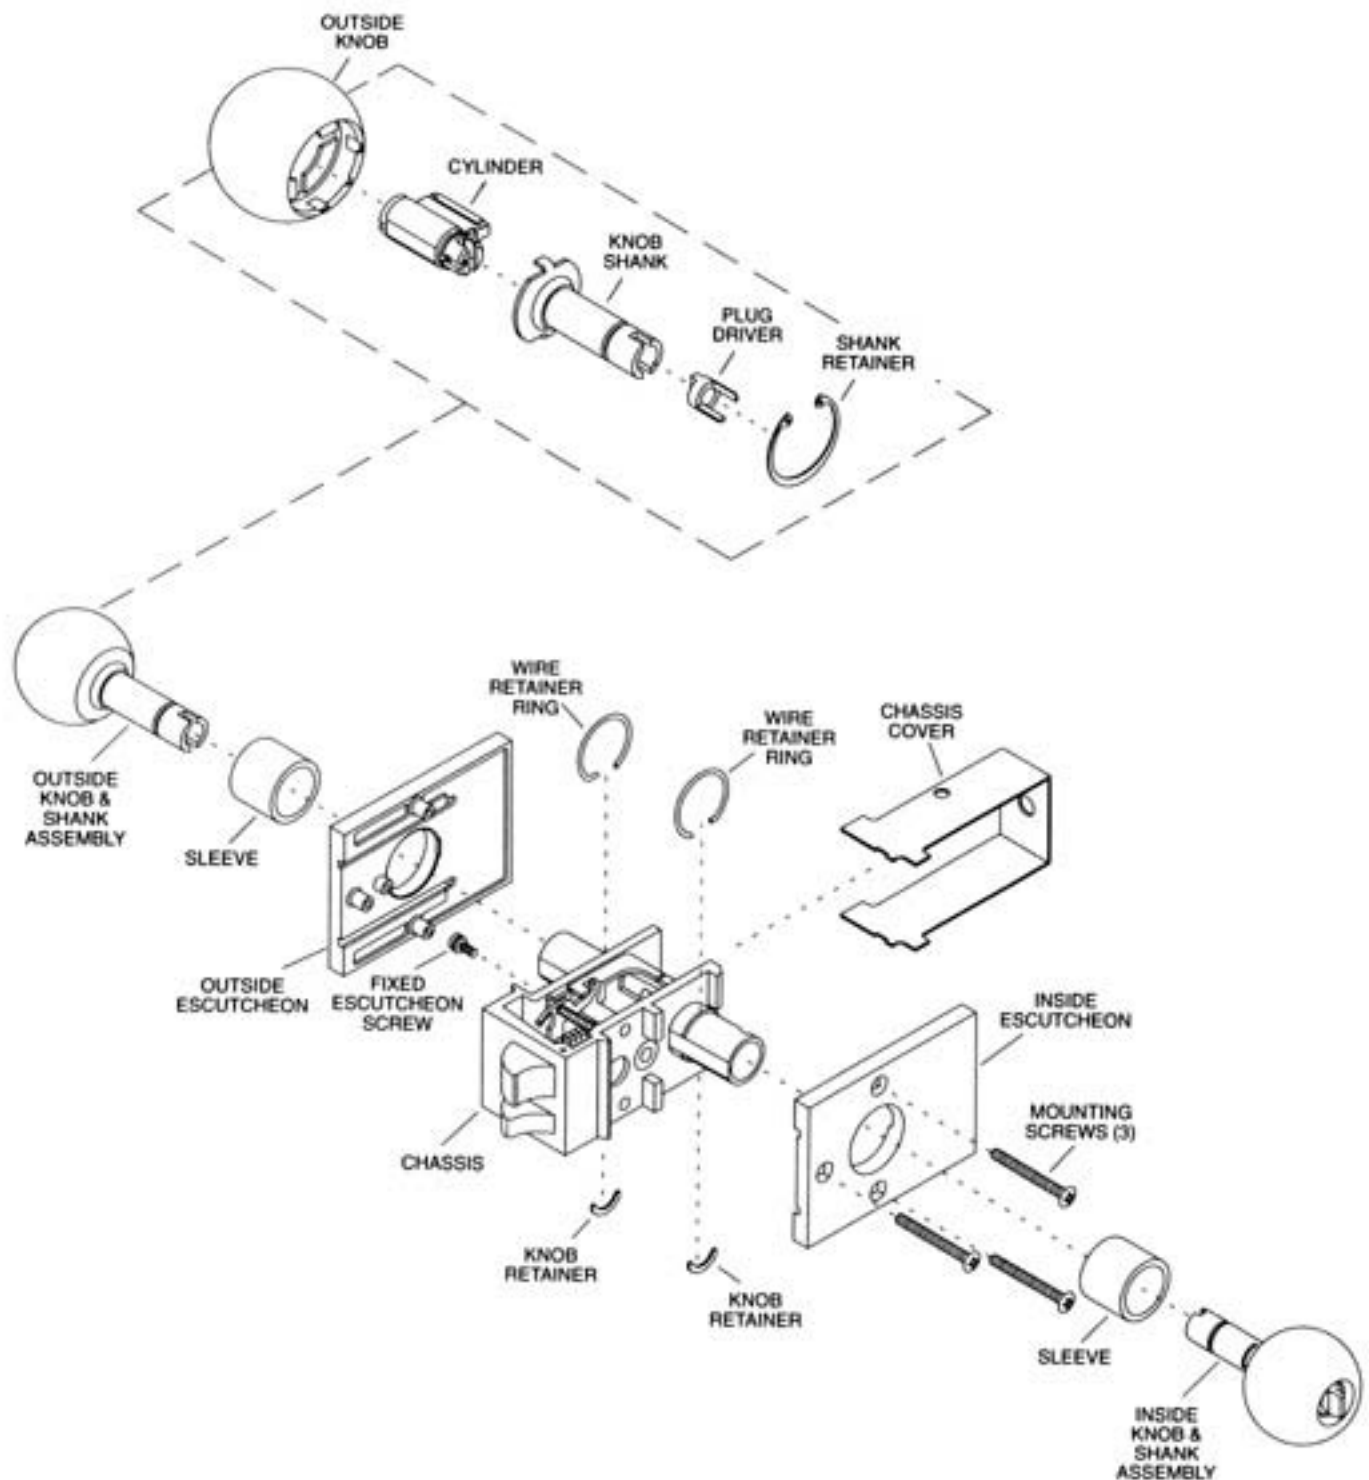


Cylinder Removal Instructions (Discontinued Models)

For Corbin 2000 / 2200 / 2400 and 500 Series (1899 – 1963) Vertical Keyway

Tools needed: $\frac{1}{8}$ " and $\frac{1}{4}$ " flat blade screwdrivers, needle nose pliers and a plastic or rawhide mallet.

Caution! No replacement parts are available for this lock.

Be very careful not to damage or distort any parts!

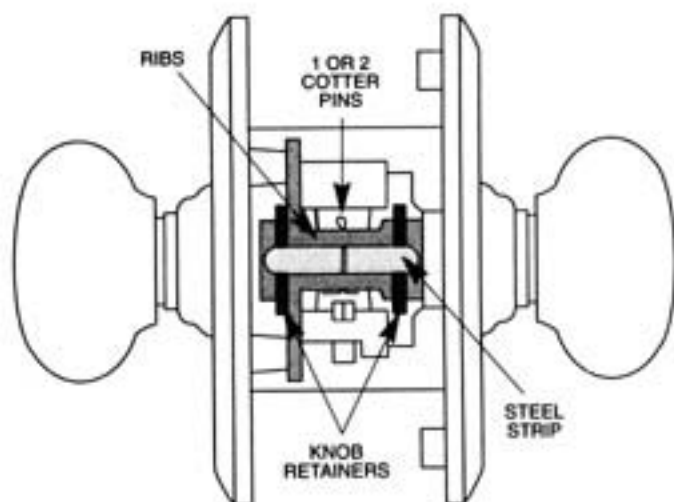

EXPOSED MECHANISM ON END OF CHASSIS OPPOSITE LATCHBOLT

1. Remove thru-bolt and remove all escutcheon screws on both sides of door. Pull lock from edge of door.
2. Remove chassis cover. Gently pry edges loose with small screwdriver while pulling cover away from chassis.
3. Observe exposed mechanism on end of chassis OPPOSITE latch bolt. For this model, a Cotter key passes through ribs in the chassis and covers a strip of steel with rounded ends. If chassis is not constructed this way, you are reading wrong set of instructions. Before removing Cotter key, turn knob(s) and observe orientation of hubs and any other small parts directly connected with knob shanks. These parts may fall out when knob(s) are removed and you will need to reinstall them correctly. Make sketch if desired. Depending on function of lock, unlock knobs by pressing stopworks button on lock front, by turning knurled ring around inside knob shank, or by using key. This may not be possible on certain functions with rigid knobs.

4. Remove cotter key and steel strip under it. If only one knob is to be removed, locate its flat steel retaining plate and remove it. Leave retainer in place for other knob.
5. To avoid spilling parts from chassis, grasp lockset by escutcheons and stand it on knob which will remain in place. Support lockset so escutcheons are parallel with work surface, and knob to be removed faces up.
6. Note orientation of keyway for proper handing during reassembly. Slowly pull knob off.
7. Remove cap from back of knob. If loose, it may have remained on trim as knob was removed. If stuck, rap end of knob shank (not cap!) with plastic or rawhide mallet to jar cap loose. If it has become sealed in place by paint, lacquer or brass polish, it may be necessary to pry it loose with small screwdriver.
8. Remove two shank screws which are now exposed. Early models have only one screw.

9. Unscrew shank from knob and remove cylinder. If shank is stuck, rap area with plastic mallet to jar loose. If this fails, knob may be held snugly in vise with protective cloth. However, remember iron knobs can crack or break and brass knobs may become distorted if abused. Place screwdriver shaft across slot in end of knob shank to turn. If shank still does not unscrew, soak knob assembly in penetrating oil or use ultra-sonic cleaner. Rap again.

On reassembly, be sure screw hole(s) in knob shank align with holes in knob before installing screws.

10. If cylinder must be dismantled, drive out actuator retaining pin. This pin also serves as plug retainer. LEAVE KEYS OUT of cylinder until you are ready to rekey it.

Caution: If you are rekeying several of these cylinders, keep all major components of each cylinder together. Mixing parts may result in end play of plug, making it necessary to "pinch" key to remove it.

Most cylinders used in these locks are master ring cylinders with X Class keyways and require .509" diameter plug follower. Refer to Corbin Russwin Cylinder Manual for cylinder combining instructions, including all pin lengths and key biting specifications.


11. Clean all parts, including inside of knob shank hole in escutcheon, and reverse these steps for reassembly. Use only dry powdered graphite to lubricate cylinder. Lubricate lockset parts as required.

Cylinder Removal Instructions (Discontinued Models)

For Corbin 700 / Russwin 1600 Series "Baby" Unit Lock – Horizontal Keyway

Tools needed: 1/8" and 1/4" flat blade screwdrivers, needle nose pliers and a plastic or rawhide mallet.

Caution! No replacement parts are available for this lock.
Be very careful not to damage or distort any parts!

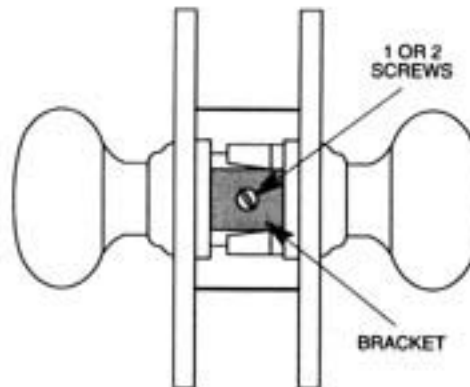

EXPOSED MECHANISM ON END
OF CHASSIS OPPOSITE LATCHBOLT

1. Remove all escutcheon screws or thru-bolts above and below knob on both sides of door. Loosen thru-bolt on inside near latch. Pull lock from edge of door.
2. Remove chassis cover. Gently pry edges loose with small screwdriver while pulling cover away from chassis.
3. Observe exposed mechanism on end of chassis OPPOSITE latch bolt. For this model, one or two screws pass through a bracket-shaped steel knob retainer. If chassis is not constructed this way, you are reading wrong set of instructions. Before removing bracket screw(s), turn knob(s) and observe orientation of hubs and any other small parts directly connected with knob shanks. These parts may fall out when knob(s) are removed and you will need to reinstall them correctly. Make sketch if desired. Depending on function of lock, unlock knobs with inside turn button or by using key. This is not possible on storeroom function with rigid outside knob.
4. Remove bracket screw(s). On reassembly, test all operations of both knobs before reinstalling screw(s).
5. To avoid spilling parts from chassis, grasp lockset by escutcheons and stand it on knob which will remain in place. Support lockset so escutcheons are parallel with work surface, and knob to be removed faces up.
6. Note orientation of keyway for proper handing during reassembly. Remove bracket and slowly pull knob off.
7. Remove cap from back of knob. If loose, it may have remained on trim as knob was removed. If stuck, rap end of knob shank (not cap!) with plastic or rawhide mallet to jar cap loose. If it has become sealed in place by paint, lacquer or brass polish, it may be necessary to pry it loose with small screwdriver.
8. Remove shank screws which are now exposed. Older model has two screws and newer model has one.
9. Unscrew shank from knob and remove cylinder. If stuck, place screwdriver shaft across slot in end of knob shank to turn. On reassembly, be sure screw holes in knob shank align with holes in knob before installing screws.
10. If cylinder must be dismantled, drive out actuator retaining pin. This pin also serves as plug retainer. LEAVE KEYS OUT of cylinder until you are ready to rekey it.
Caution: If you are rekeying several of these cylinders, keep all major components of each cylinder together. Mixing parts may result in end play of plug, making it necessary to "pinch" key to remove it.
Most cylinders used in these locks are master ring cylinders with X Class keyways with .509" plugs. Refer to Corbin Russwin Cylinder Manual for cylinder combining instructions, including all pin lengths and key biting specifications.
11. Clean all parts, including inside of knob shank hole in escutcheon, and reverse these steps for reassembly. Use only dry powdered graphite to lubricate cylinder. Lubricate lockset parts as required.


Cylinder Removal Instructions (Discontinued Models)

For Russwin 2100 / 2800 Series Only (1904 – 1968) – Vertical Keyway

Tools needed: $\frac{1}{8}$ " and $\frac{1}{4}$ " flat blade screwdrivers, needle nose pliers and a plastic or rawhide mallet.

Caution! No replacement parts are available for this lock.

Be very careful not to damage or distort any parts!

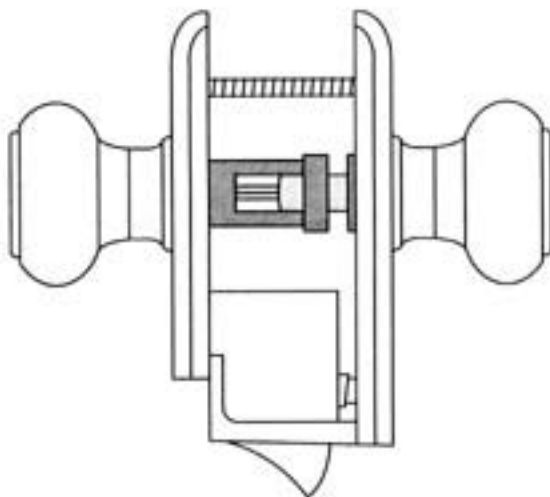

EXPOSED MECHANISM
ON TOP OF LOCKSET

1. Remove thru-bolt and remove all escutcheon screws on both sides of door. Pull lock from edge of door.
If your only task is to fit keys, further disassembly may not be required. If cylinder has never been rekeyed, look through slots in knob shank for original key biting stamped on square tailpiece. Refer to Corbin Russwin Cylinder Manual for biting prefix and key biting specifications.
Cylinder removal depends on hand of lockset. If keyed knob has staked hub visible on underside of escutcheon, skip to step 4. If keyed knob is in escutcheon with encased mechanism, continue with step 2.
2. Remove screws from plate covering mechanism under escutcheon (NOT cover of latch assembly). Before removing exposed parts, make sketch of their orientation for reassembly.
3. Remove spring and other parts, laying them out for reassembly.

Note orientation of bottom hub with respect to cylinder keyway for proper handing upon reassembly.

4. Carefully pry staked hub from base of knob shank. If hub bends, lock will not operate smoothly when reassembled. Also, some knobs are cast iron and staked area may break. Proceed with caution. Upon reassembly, tap hub back into place with plastic or rawhide mallet. If one is not available, use heavy screwdriver handle.
5. Using two screwdrivers, gently pry retainer ring from around knob shank and remove it. Do not allow wire to become bent or distorted.
6. With small screwdriver, disengage three arc-shaped retainers from around knob shank and remove knob assembly from escutcheon.
7. Remove cap from back of knob. If stuck, rap end of knob shank (not cap!) with a plastic mallet to jar cap loose. If it has become sealed in place by paint or brass polish, it may be necessary to pry it loose with small screwdriver.

8. Remove two shank screws which are now exposed.
9. Unscrew shank from knob and remove cylinder. If shank is stuck, rap area with plastic mallet to jar loose. If this fails, knob may be held snugly in vise with protective cloth. However, remember iron knobs can crack or break and brass knobs may become distorted if abused.

For early models with square shank base, use adjustable wrench for extra leverage to unscrew shank. Before applying extreme force to stuck shank, soak assembly in penetrating oil or use ultra-sonic cleaner and rap again with plastic mallet.

On reassembly, be sure screw holes in knob shank align with knob base before reinstalling screws.

10. If cylinder must be dismantled, drive out tailpiece retaining pin. This pin also serves as plug retainer. LEAVE KEYS OUT of cylinder until you are ready to rekey it.

Caution: If you are rekeying several of these cylinders, keep all major components of each cylinder together. Mixing parts may result in end play of plug, making it necessary to "pinch" key to remove it.

Use .552" diameter plug follower. Refer to Corbin Russwin Cylinder Manual for cylinder combining instructions, including all pin lengths and key biting specifications.

11. Clean all parts, including inside of knob shank hole in escutcheon, and reverse these steps for reassembly. Use only dry powdered graphite to lubricate cylinder. Lubricate lockset parts as required.

Service Procedures

All procedures which follow are intended for use only with the current model lockset (Model 68) and the current offering of functions. For obsolete functions or models or designs, use these steps only as a guide and tailor them to your particular lockset.

Some obsolete locksets may contain handed parts which are not field reversible.

Changing from Knobs to Levers

This is *possible* for all functions except UT5261 but it is *not practical*. Major components must be replaced and the cost can be prohibitive. In addition to the two levers with their shanks, return springs and spring anchors, both escutcheons must also be changed.

Changing Hand of Lockset Knob Version

Tools Required:


Phillips screwdriver, and large and small slotted screwdriver.
For UT5282 (store door) function, Waldes ring applicator E-015 (order as 301F59-8) and second small slotted screwdriver.

To change between LH and RH, or between LHR and RHR, turn lockset upside down. No further action is required.

To change between regular and reverse bevel, the components which must be switched vary by function. For UT5210 (passage) and UT5282 (store door), both sides operate identically, so the only thing which distinguishes regular or reverse bevel is which side of door has exposed screws. For UT5210, this is purely an esthetic concern. For UT5282, security may be a factor in the decision. If neither is a concern for your particular application, there is no need to reverse either of these functions.

For all other functions:

1. Remove throughbolts and chassis cover. Notice that one escutcheon is loose and other is fixed. Fixed escutcheon is always attached to chassis on low side of bevel, which is side of chassis with three vertical ribs. This will be outside for regular bevel (RH and LH) and inside for reverse bevel (RHR and LHR). Consequently, fixed side will change during this procedure.
2. For all functions except UT5282 (store door), skip to step 3.
For UT5282, remove small retainer (item #30 on exploded view page). This can be challenging, so be patient. With small screwdriver, rotate retainer around spindle until its opening is in position of easiest access. Use second small screwdriver with first screwdriver to spread retainer and remove it from spindle.

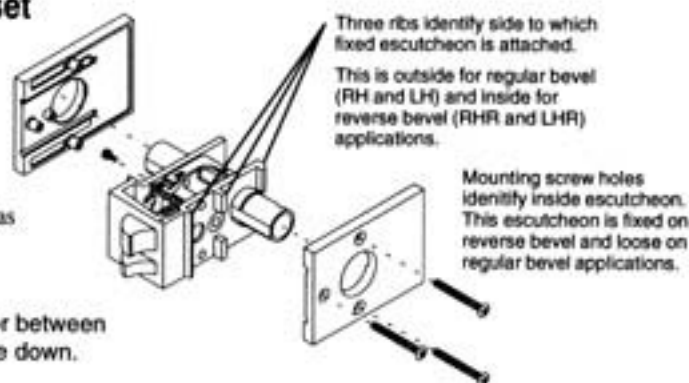

3. Starting under loose escutcheon, use small screw driver to disengage retainer ring from groove around chassis tube, exposing crescent knob retainer. Remove retainer, then knob assembly with sleeve and escutcheon. If knob contains cylinder or button assembly, do not allow parts to fall out of knob shank. If knob has filler cap (optional on current model) keep it in place. With chassis centered in your work space, lay all parts out in order on side of chassis from which they were removed.
4. With all trim removed from first side, locate phillips screw which fastens opposite escutcheon from inside of chassis. Insert screwdriver through access hole in wall of chassis and remove screw and washer.
5. With second escutcheon now loose, disengage retainer ring from groove around chassis tube, exposing crescent knob retainer. Remove retainer, then knob assembly with sleeve and escutcheon. If knob contains cylinder or button assembly, do not allow parts to fall out of knob shank. All trim components should now be laid out in order on proper sides of chassis.

For functions other than UT5210 (passage), continue with step 6.

For UT5210, no further disassembly is required. Skip to step 11.

Changing Hand of Lockset Knob Version (cont'd)

6. Before proceeding, make mental note of chassis orientation relative to parts already laid out. Use ribbed wall as reference point and remember whether it faced left or right.
All functions except UT5210 and UT5282 have a spindle which passes through chassis tube from one side, continues through various hubs and spacers in center of chassis and continues outward through opposite chassis tube. Parts vary by function and so does direction of spindle removal.
Carefully tilt chassis to look into each end of tube and determine which end of spindle is smaller. Hold chassis so small end of spindle points upward. If spindle falls out bottom tube at this point, lay it out with other parts on proper side of work space and proceed to step 7. Otherwise, look for small pin through hole in end of spindle.
Push spindle up from bottom until small pin can be removed through hole in chassis tube. Caution! Cover top end of tube during this process. Some functions have parts which spring off spindle when pin is removed. Spindle should now drop out. If not, gently rotate it until it falls out. Lay spindle and all other parts out in order on proper side(s) of work space.
7. Observe order and orientation of hubs and spacers inside chassis. Consult exploded view page for reference. Depress main latch to allow hubs to fall out. Again, lay them out carefully in center of work space from left to right as originally installed. Disassembly is now complete.
8. Turn chassis over so opposite tube points up. Depress main latch and reload hubs in same order as removed. Refer to appropriate exploded view page if parts get mixed. Caution: if any hub has a rectangular or "double-D" hole, its orientation is critical. **Diagonal flats of hole must face holes in latch tube.**
9. Install small end of spindle from bottom, passing through all hubs. If spindle has flat sides, verify that hole in spindle faces holes in frame tube. If not, Step 8 was incorrect.
10. Supporting spindle with finger in bottom tube, reinstall other parts (depending on function) over top end of spindle. In the case of some spring loaded assemblies, use small screwdriver to depress assembly into the chassis far enough to

clear hole in end of spindle. Insert retainer pin through frame tube hole and install into spindle.

Before proceeding, check orientation of all parts in chassis against exploded view page. For comparison, all pages illustrate left hand reverse bevel assembly.

11. Remembering original left-to-right orientation of chassis on work space, turn chassis upside down so knobs and escutcheons are ready to install on opposite sides from original orientation. Note: Opposite escutcheon now becomes fixed (always attached to ribbed wall of chassis). Only small screw and washer must switch sides at this point. These must enter from other side of chassis for reassembly.
Observe sides of chassis and locate side with three vertical ribs. Install trim on this side first.
12. Place circular wire retainer around frame tube, but do not push all the way into position.
13. Put sleeve into back of knob and place that assembly through hole in escutcheon. Slide knob into frame tube as far as it will go. If this knob has cylinder, be sure top of keyway points toward latch (edge of door.) Groove around the knob shank should now be positioned under the retainer slot in the frame tube.
14. Install crescent knob retainer and move retainer ring into place to secure crescent retainer.
15. Install fixed escutcheon screw and washer with screwdriver through hole in opposite wall of chassis.
(Tip: Use needlenose pliers to position screw inside chassis for screwdriver OR: Place screw on screwdriver tip and point lockset upward to start screw into threads.)
16. Repeat steps 10, 11 and 12 for remaining side.
17. For all functions except UT5282 (store door), proceed to step 18. For UT5282, small retainer removed in step 2 must be reinstalled. This can be very difficult without Waldes ring applicator.
18. Test operation of all keys, buttons and knobs. Install chassis cover and throughbolts.

Service Procedures


Changing Hand of Lockset Lever Version

Because levers are handed, it is not practical to print detailed hand changing instructions. There are too many variations, depending on function and cylinder options.

Use chart below to determine what parts and labor are necessary for the conversion you are attempting. Then, for specific service instructions, refer to previous pages devoted to:

- disassembly of lever version
- changing the hand of the knob version.

Note: New levers must be obtained when making the changes in the second half of the diagram below.

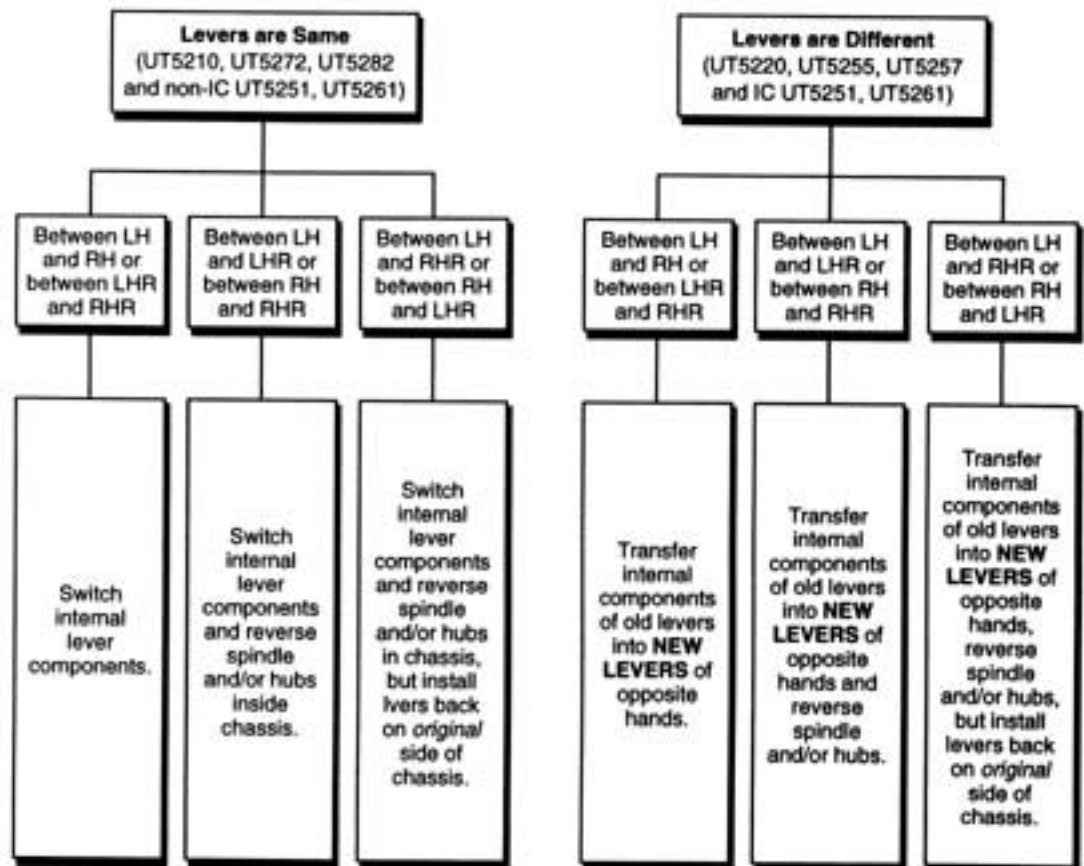

For more information regarding Corbin Russwin Locksets,
Exit Devices, Door Controls and Key Systems, contact your
authorized Corbin Russwin Distributor or Sales Representative.



In U.S.:
Corbin Russwin Architectural Hardware
1902 Airport Rd.
Monroe, NC 28112
Phone 704-283-2101 Fax 704-289-2875

In Canada:
Corbin Russwin Canada
3160 Orlando Drive
Mississauga, ONT L4V 1R5
Phone 800-461-3007 / 905-672-6220
Fax 800-461-8989 / 905-672-9022

